

SHIFT LOCK INSTRUCTIONS

PICTURE 1

1. MAKE SURE THE KEY IS TURNED VERTICALLY IN THE UNLOCK POSITION
2. MAKE SURE THE PLATE IS LOOSE NOT TIGHT
3. UNSCREW AND REMOVE THE SCREW ALL THE WAY, DO NOT LOOSE THE SCREW

PICTURE 2

1. GENTLY SLIDE THE UPPER HOUSING WITHOUT DISTURBING THE INSIDE MECHANISM

PICTURE 3

1. FLIP THE SHIFT LOCK UPSIDE DOWN AND CAREFULLY.
2. LIFT THE UPPER HOUSING OFF CAREFULLY
3. THE SQUARE PIN AND THE BOTTOM PLATE SHOULD ALWAYS LINE UP WHEN OPENING AND CLOSING.

PICTURE 4

1. REMOVE THE SHIFT LOCK PLATE THAT HAS THE SPRING, DO NOT LOOSE THE SPRING.
2. REMOVE ALSO THE TOP PLATE.


PICTURE 5

1. NOW THAT YOU HAVE TAKEN THE PARTS OUT. GET THE TWO BOLTS GIVEN TO YOU.
2. SCREW THE BOLTS TO THE TUNNEL.
3. REPEAT THE REVERSE OF THE INSTRUCTIONS FROM PICTURE 5-1 TO INSTALL IT ALL BACK.


PICTURE 1




PICTURE 2

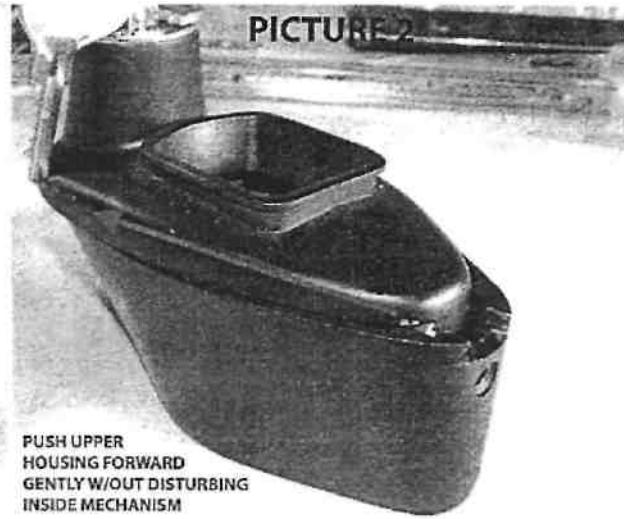

PICTURE 3

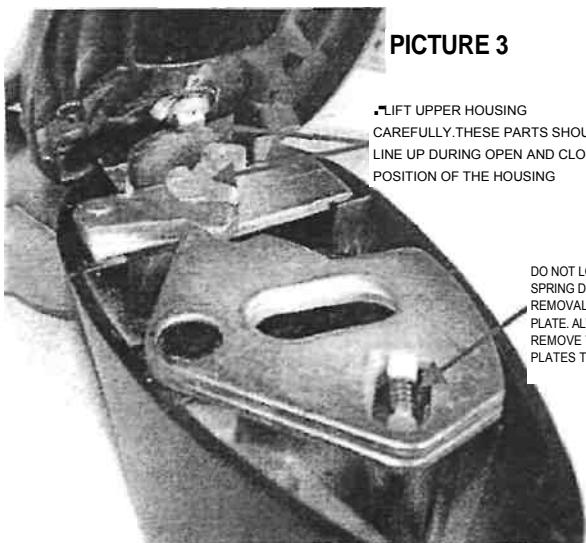

PICTURE 4

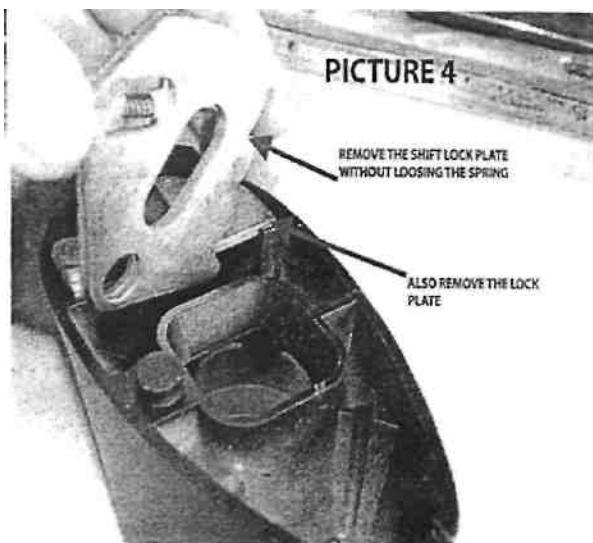

PICTURE 5

