



Important note for flywheels 01503, 01504 and 04504

Before mounting, check that the dowel pins do not have too much play, too much play can cause the flywheel to loosen. This will cause enormous damage to the engine. Use only a crankshaft seal without an additional (double) lip with this flywheel. These references 01639 or 01640 are best suited for this purpose. The use of a seal with an additional (double) inevitably leads to leaks. The indentation of the tread starts earlier than the original, which makes the connection stronger, but has the disadvantage that the diameter is increased where the additional lip has to do its job and will break.