

## Part # 211 971 028F 1968-1969 Bus, Main Loom Only

## 1968-1969 Bus Export Model Main Wiring Harness


This main wiring harness kit fits 1968-1969 export Bus models. If your Bus is a European model, or some electrical upgrades have been performed (such as an alternator, or additional equipment), some modifications will be required.

Basic automotive electronic knowledge is essential for proper installation of this wiring harness. Thoroughly read these installation instructions and study the diagrams to familiarize yourself with the basic layout of your vehicle's electrical system.

Document the routing of the old wiring harness prior to removal. A digital camera is a useful tool for this step.

Remove battery from Bus, or disconnect negative cable. Removal of the battery will allow for greater room in which to work.


Please follow the diagram on the last page for the correct position of each wire.

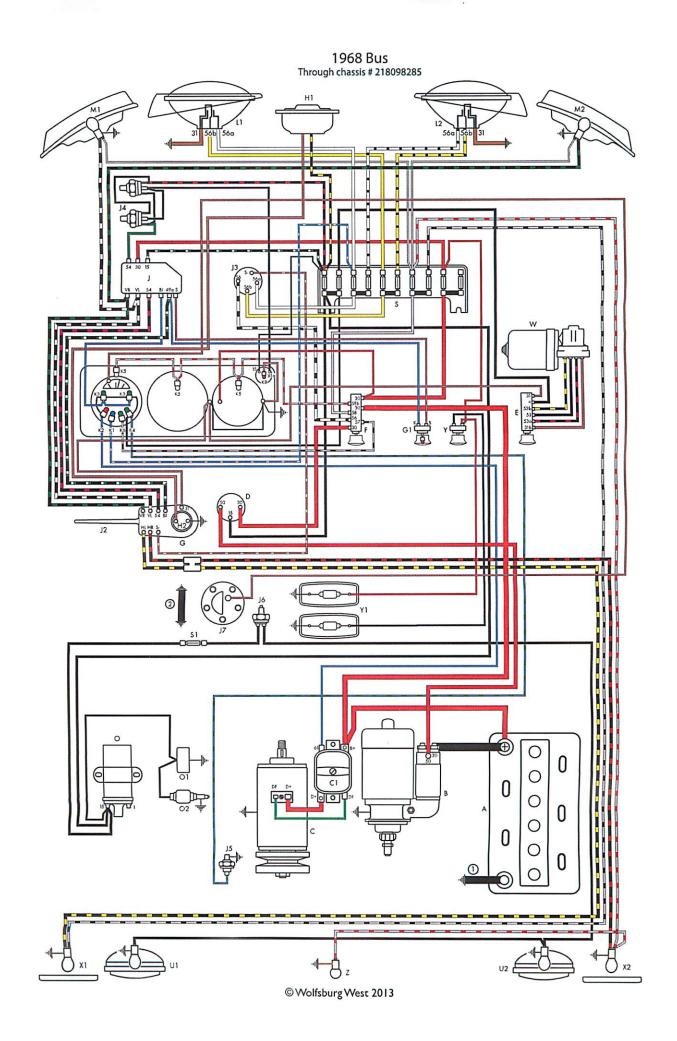

| A B C C1 D E F G G1 H1 H2 J J3 J4 | Starter Generator Voltage regulator Starter/Ignition switch Windshield wiper switch Light switch Turn indicator switch Emergency flasher switch Horn Horn button Turn Signal/Emergency relay Dimmer switch Dimmer relay | K6<br>K8<br>L1<br>L2<br>M1<br>M2<br>O<br>O1<br>O2<br>S<br>S1<br>U1<br>U2<br>W | Parking indicator light Brake warning light Sealed-beam unit, left Sealed-beam unit, right Parking light/Turn light, left Parking light/Turn light, right Coil Automatic choke Electric idle jet Fuse box, 10 fuse Back-up light fuse in engine compartment Back-up light, left Back-up light, right Windshield wiper motor Stop/tail/turn light, rear left |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                   |                                                                                                                                                                                                                         | W<br>X1<br>X2<br>Y<br>Y1<br>Z                                                 |                                                                                                                                                                                                                                                                                                                                                             |
| K5                                | Instrument lights                                                                                                                                                                                                       | 2                                                                             | Chassis to transaxle ground strap                                                                                                                                                                                                                                                                                                                           |

.

.

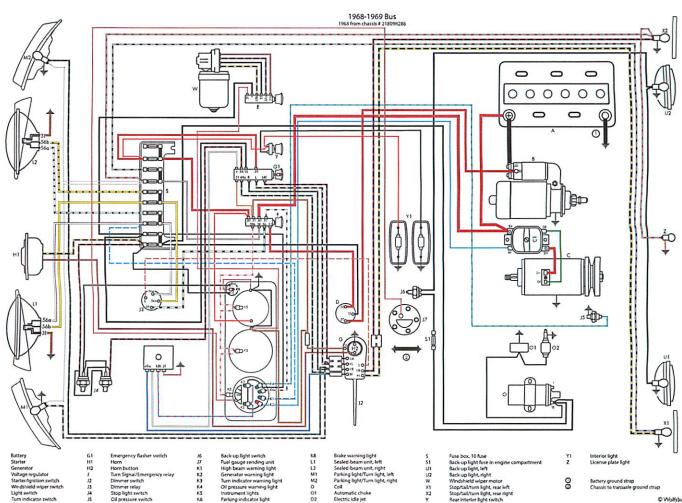

ABCCIDEFG

Emergency flasher switch Horn Horn button Turn Signal/Emergency rel Dimmer switch Dinmer relay Stop light switch Oil pressure switch

Back-up light switch Fuel gauge sending unit High beam warning light Generator warning light Turn indicator warning light Oil pressure warning light Instrument lights Parking indicator light

K8 L1 L2 M1 M2 O O1

Fuse box, 10 fuse Back-up light fuse in engine of Back-up light, left Back-up light, right Windshield wiper motor Stophali/turn light, rear left Stophali/turn light, rear right Rear interior light switch

S S1 U1 U2 W X1 X2 Y

Interior light License plate light

00

© Wolfsburg West 2013

