



Part # 211 971 028J
1970-1971 Bus, Main Loom Only

1970-1971 Bus Export Model Main Wiring Harness


This main wiring harness kit fits 1970-1971 export Bus models. If your Bus is a European model, or some electrical upgrades have been performed (such as an alternator, or additional equipment), some modifications will be required.

The diagnostic test plug (late 1971 models) and the associated wiring is not included.

Basic automotive electronic knowledge is essential for proper installation of this wiring harness. Thoroughly read these installation instructions and study the diagrams to familiarize yourself with the basic layout of your vehicle's electrical system.


Document the routing of the old wiring harness prior to removal. A digital camera is a useful tool for this step. Remove battery from Bus, or disconnect negative cable. Removal of the battery will allow for greater room in which to work.

Please follow the diagram on the last page for the correct position of each wire.

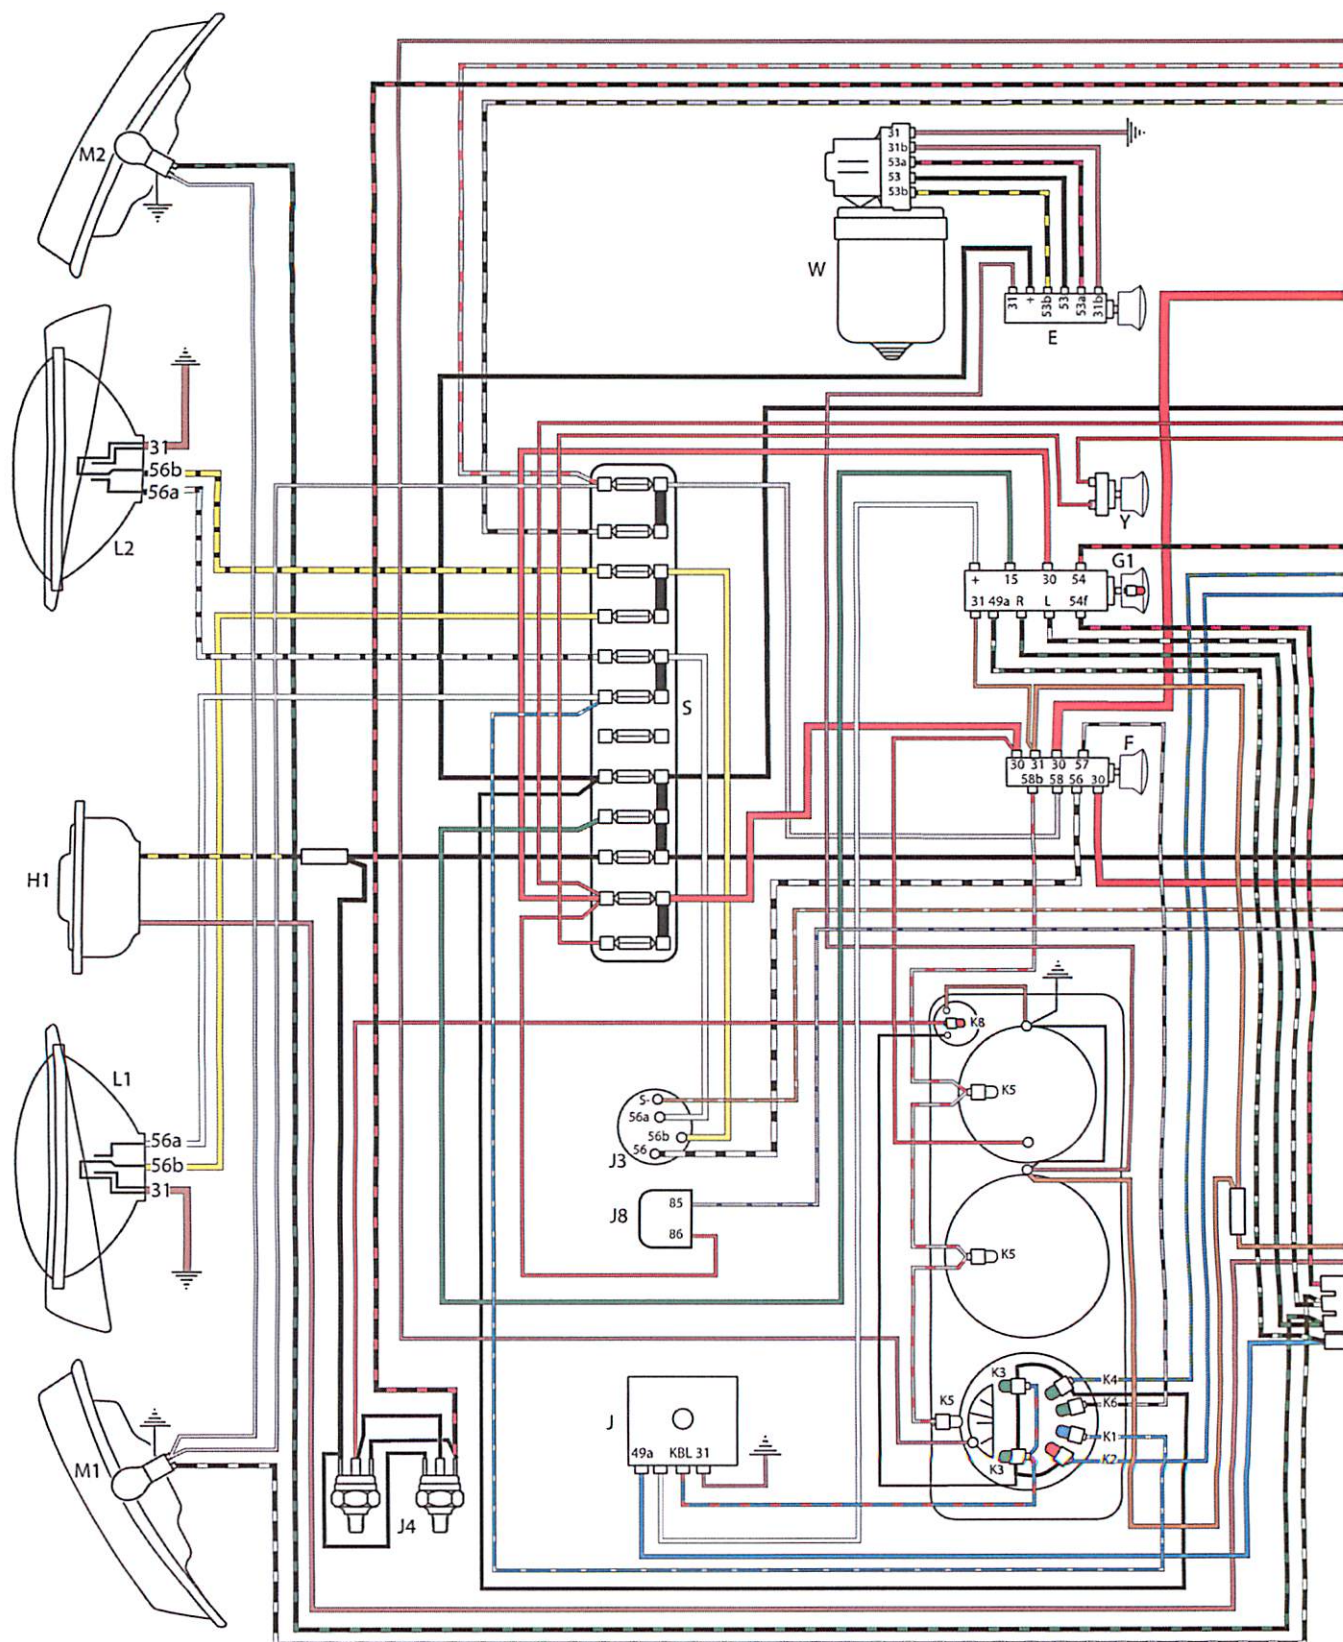


A	Battery	G	Turn indicator switch	J4	Stop light switch	K3	Turn warning lig
B	Starter	G1	Emergency flasher switch	J5	Oil pressure switch	K4	Oil pressure warn
C	Generator	H1	Horn	J6	Back-up light switch	K5	Instrument lights
C1	Voltage regulator	H2	Horn button	J7	Fuel gauge sending unit	K6	Parking indicator
D	Starter/Ignition switch	J	Turn/Emergency relay	J8	Door buzzer	K8	Brake warning lig
E	Windshield wiper switch	J2	Dimmer switch	K1	High beam warning light	L1	Sealed-beam unit
F	Light switch	J3	Dimmer relay	K2	Generator warning light	L2	Sealed-beam unit

1970 Bus

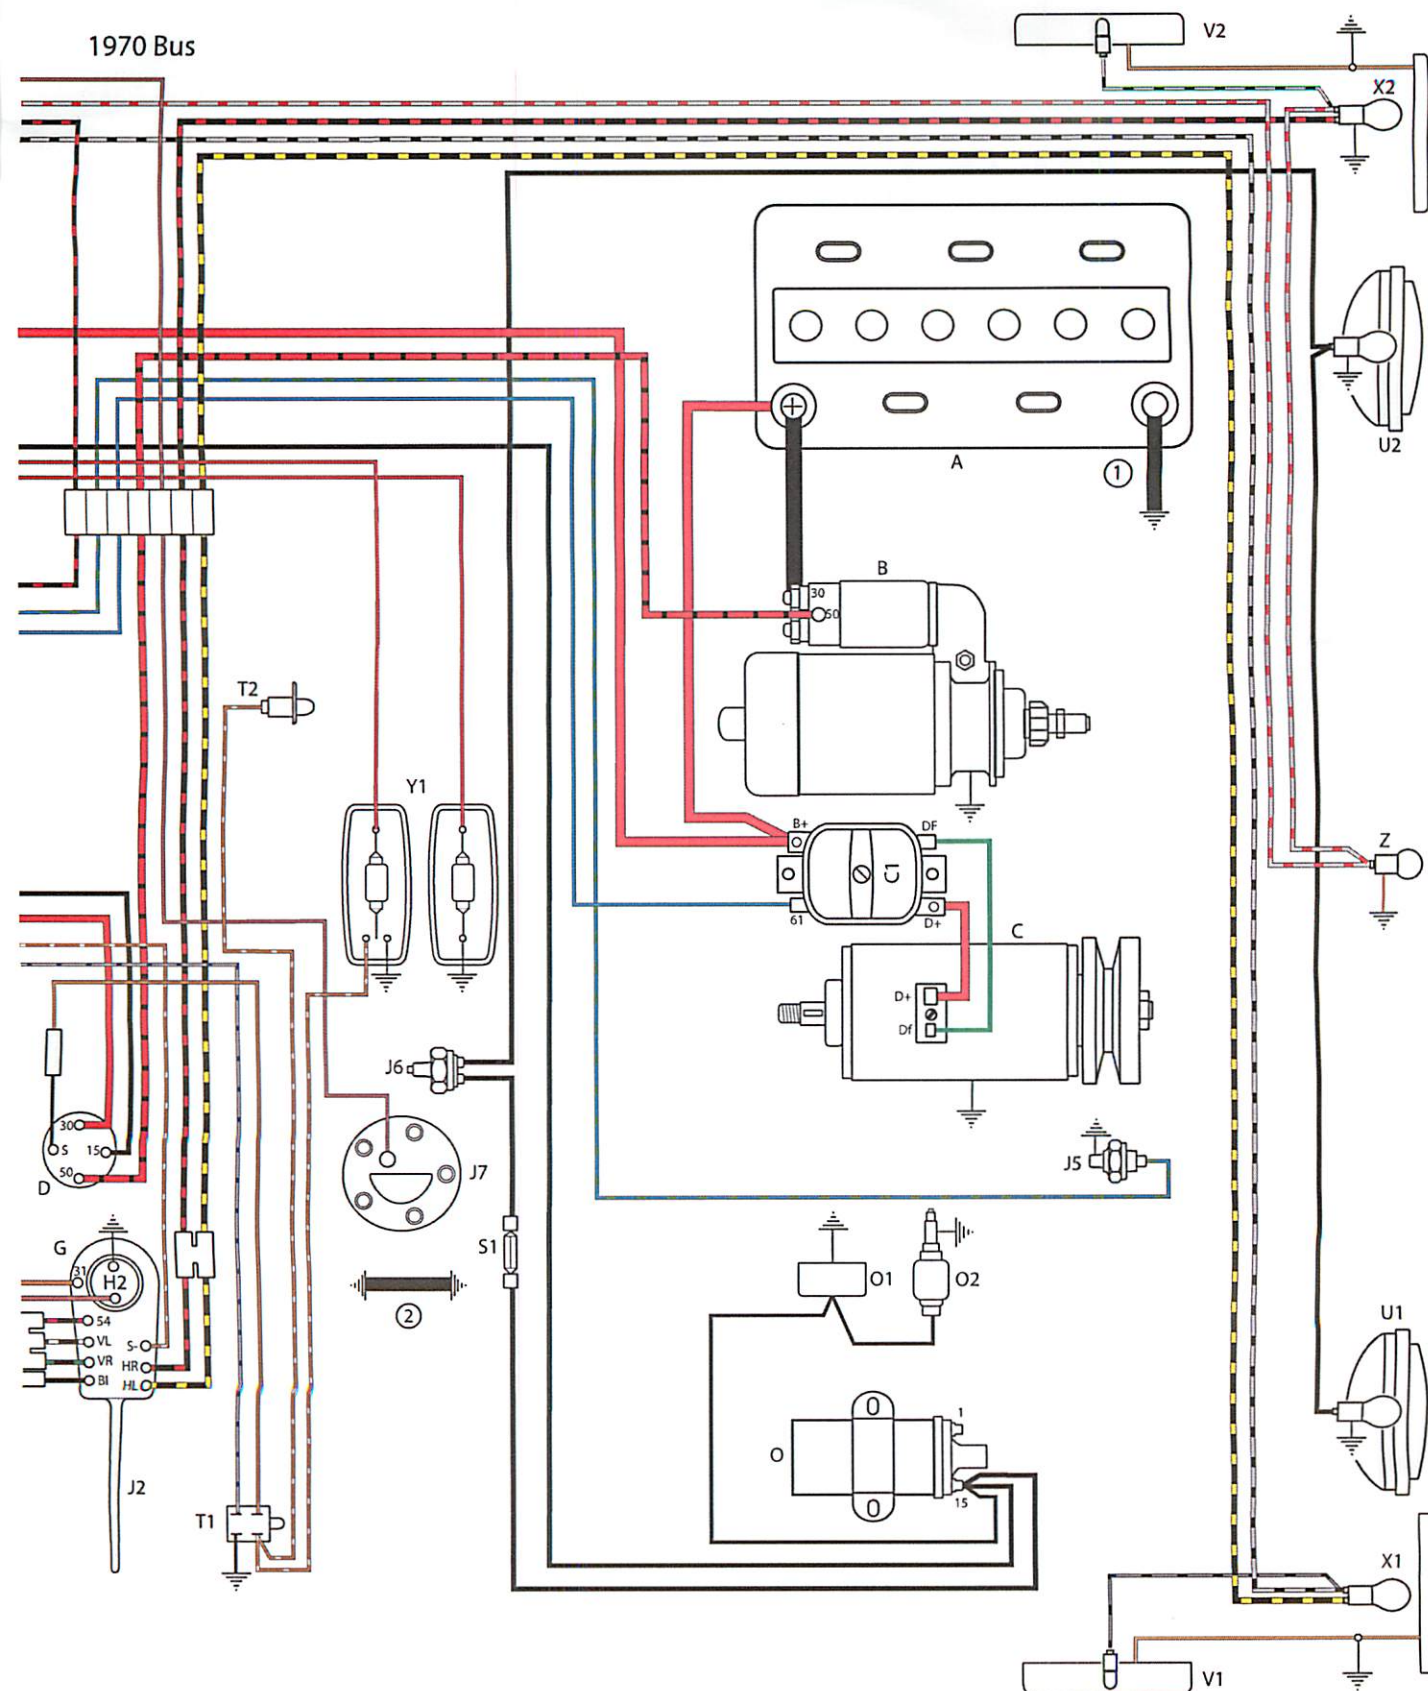

ht	M1	Parking light/Turn light, left	T1	Dome light switch, left	X1	Stop/tail/turn light, rear left
ing light	M2	Parking /Turn light, right	T2	Dome light switch, right	X2	Stop/tail/turn light, rear right
	O	Coil	U1	Back-up light, left	Y	Rear interior light switch
light	O1	Automatic choke	U2	Back-up light, right	Y1	Interior light
ht	O2	Electric idle jet	V1	Side marker light, left	Z	License plate light
t, left	S	Fuse box, 12 fuse	V2	Side marker light, right	①	Battery ground strap
t, right	S1	Back-up light fuse	W	Windshield wiper motor	②	Chassis to transaxle ground strap

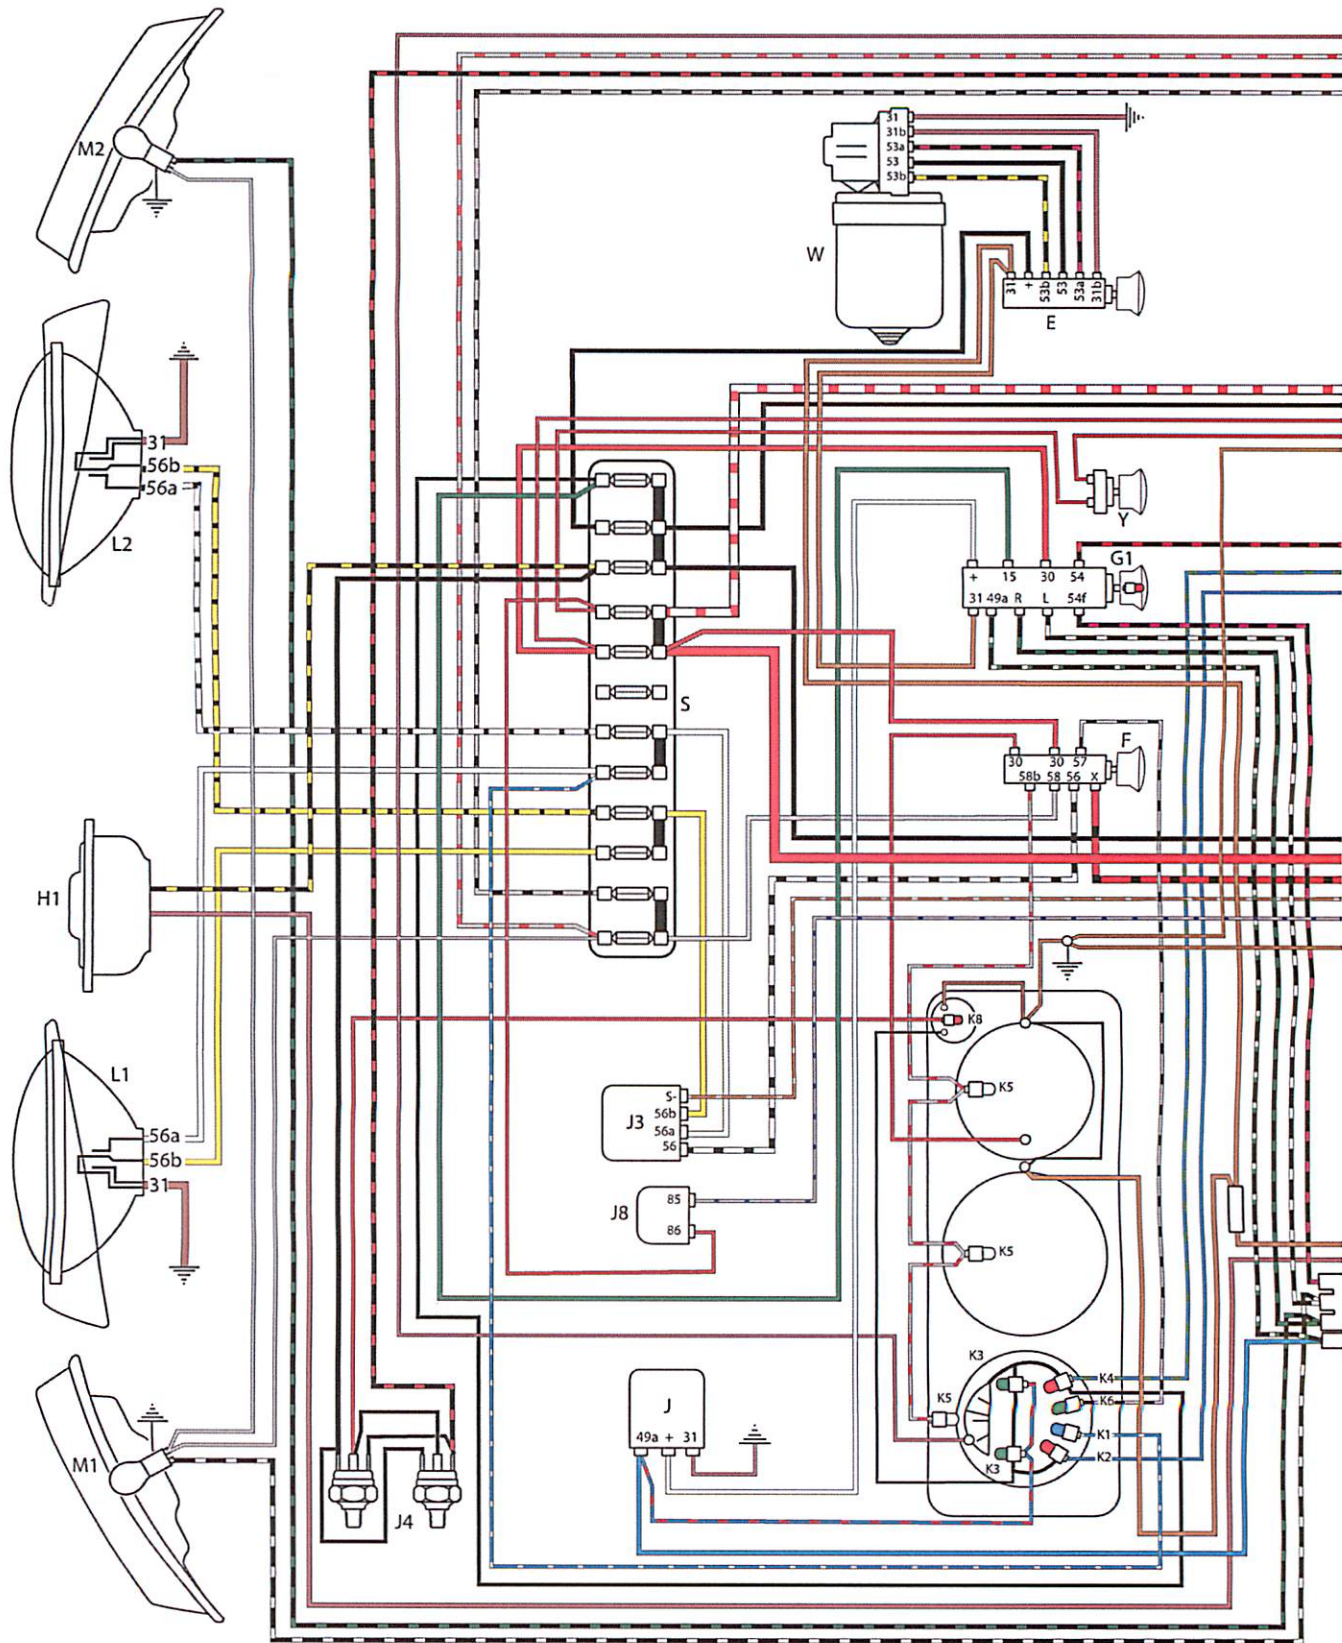

A	Battery	G	Turn indicator switch	J4	Stop light switch	K3	Turn warning light
B	Starter	G1	Emergency flasher switch	J5	Oil pressure switch	K4	Oil pressure warning light
C	Generator	H1	Horn	J6	Back-up light switch	K5	Instrument lights
C1	Voltage regulator	H2	Horn button	J7	Fuel gauge sending unit	K6	Parking indicator
D	Starter/ignition switch	J	Turn/Emergency relay	J8	Door buzzer	K8	Brake warning light
E	Windshield wiper switch	J2	Dimmer switch	K1	High beam warning light	L1	Sealed-beam unit
F	Light switch	J3	Dimmer relay	K2	Generator warning light	L2	Sealed-beam unit

nt	M1	Parking light/Turn light, left	T1	Dome light switch, left	X1	Stop/tail/turn light, rear left
ing light	M2	Parking /Turn light, right	T2	Dome light switch, right	X2	Stop/tail/turn light, rear right
	O	Coil	U1	Back-up light, left	Y	Rear interior light switch
light	O1	Automatic choke	U2	Back-up light, right	Y1	Interior light
ht	O2	Electric idle jet	V1	Side marker light, left	Z	License plate light
t, left	S	Fuse box, 12 fuse	V2	Side marker light, right	①	Battery ground strap
t, right	S1	Back-up light fuse	W	Windshield wiper motor	②	Chassis to transaxle ground strap

