



Quick Shift Instructions

- 1. Remove floor mat and shift to neutral.**
- 2. Remove attaching bolts from gearshift lever housing.**
- 3. Remove gearshift lever, housing, boot and spring as one unit.**
- 4. Remove reverse lock out plate.**
- 5. Clean all components.**
- 6. Remove shift knob, slide boot and housing from lever.**
- 7. Place fulcrum ball, housing, boot and shift knob on lever.**
- 8. Install reverse lock out plate with the ramp facing up and on the right side of car.**
- 9. Place base spacer over lock out plate making certain that plate fits in the hollow flange of spacer and is firmly secured.**
- 10. Lubricate all parts.**
- 11. Replace gear shift lever in former position and install the longer bolts provided.**
- 12. Check adjustments by shifting gears. If can engage reverse without depressing lever, loosen bolts and move housing to the left as far as possible, tighten bolts again.**
- 13. Replace floor mat.**