



Part # 133 971 011D
Wiring Main Loom, 1975-1979 Super Beetle

1975-1979 Super Beetle Main Wiring Harness

This main wiring harness fits Super Beetles years 1975-1979 sedan and convertible.

Basic automotive electronic knowledge is essential for proper installation of this wiring harness. Thoroughly review the diagrams on the following pages to familiarize yourself with the basic layout of your vehicle's electrical system.

Document the routing of the old wiring harness prior to removal. A digital camera is a useful tool for this step.


Disconnect negative cable from battery before starting the installation of this wiring harness.


Please follow the diagram on the last page for the correct position of each wire.

Component List

- Main Harness (1)
- Grommets (2)
- 1 to 1 connectors (7)
- 1 to 2 connector (1)

1975-1977 Super Beetle Export

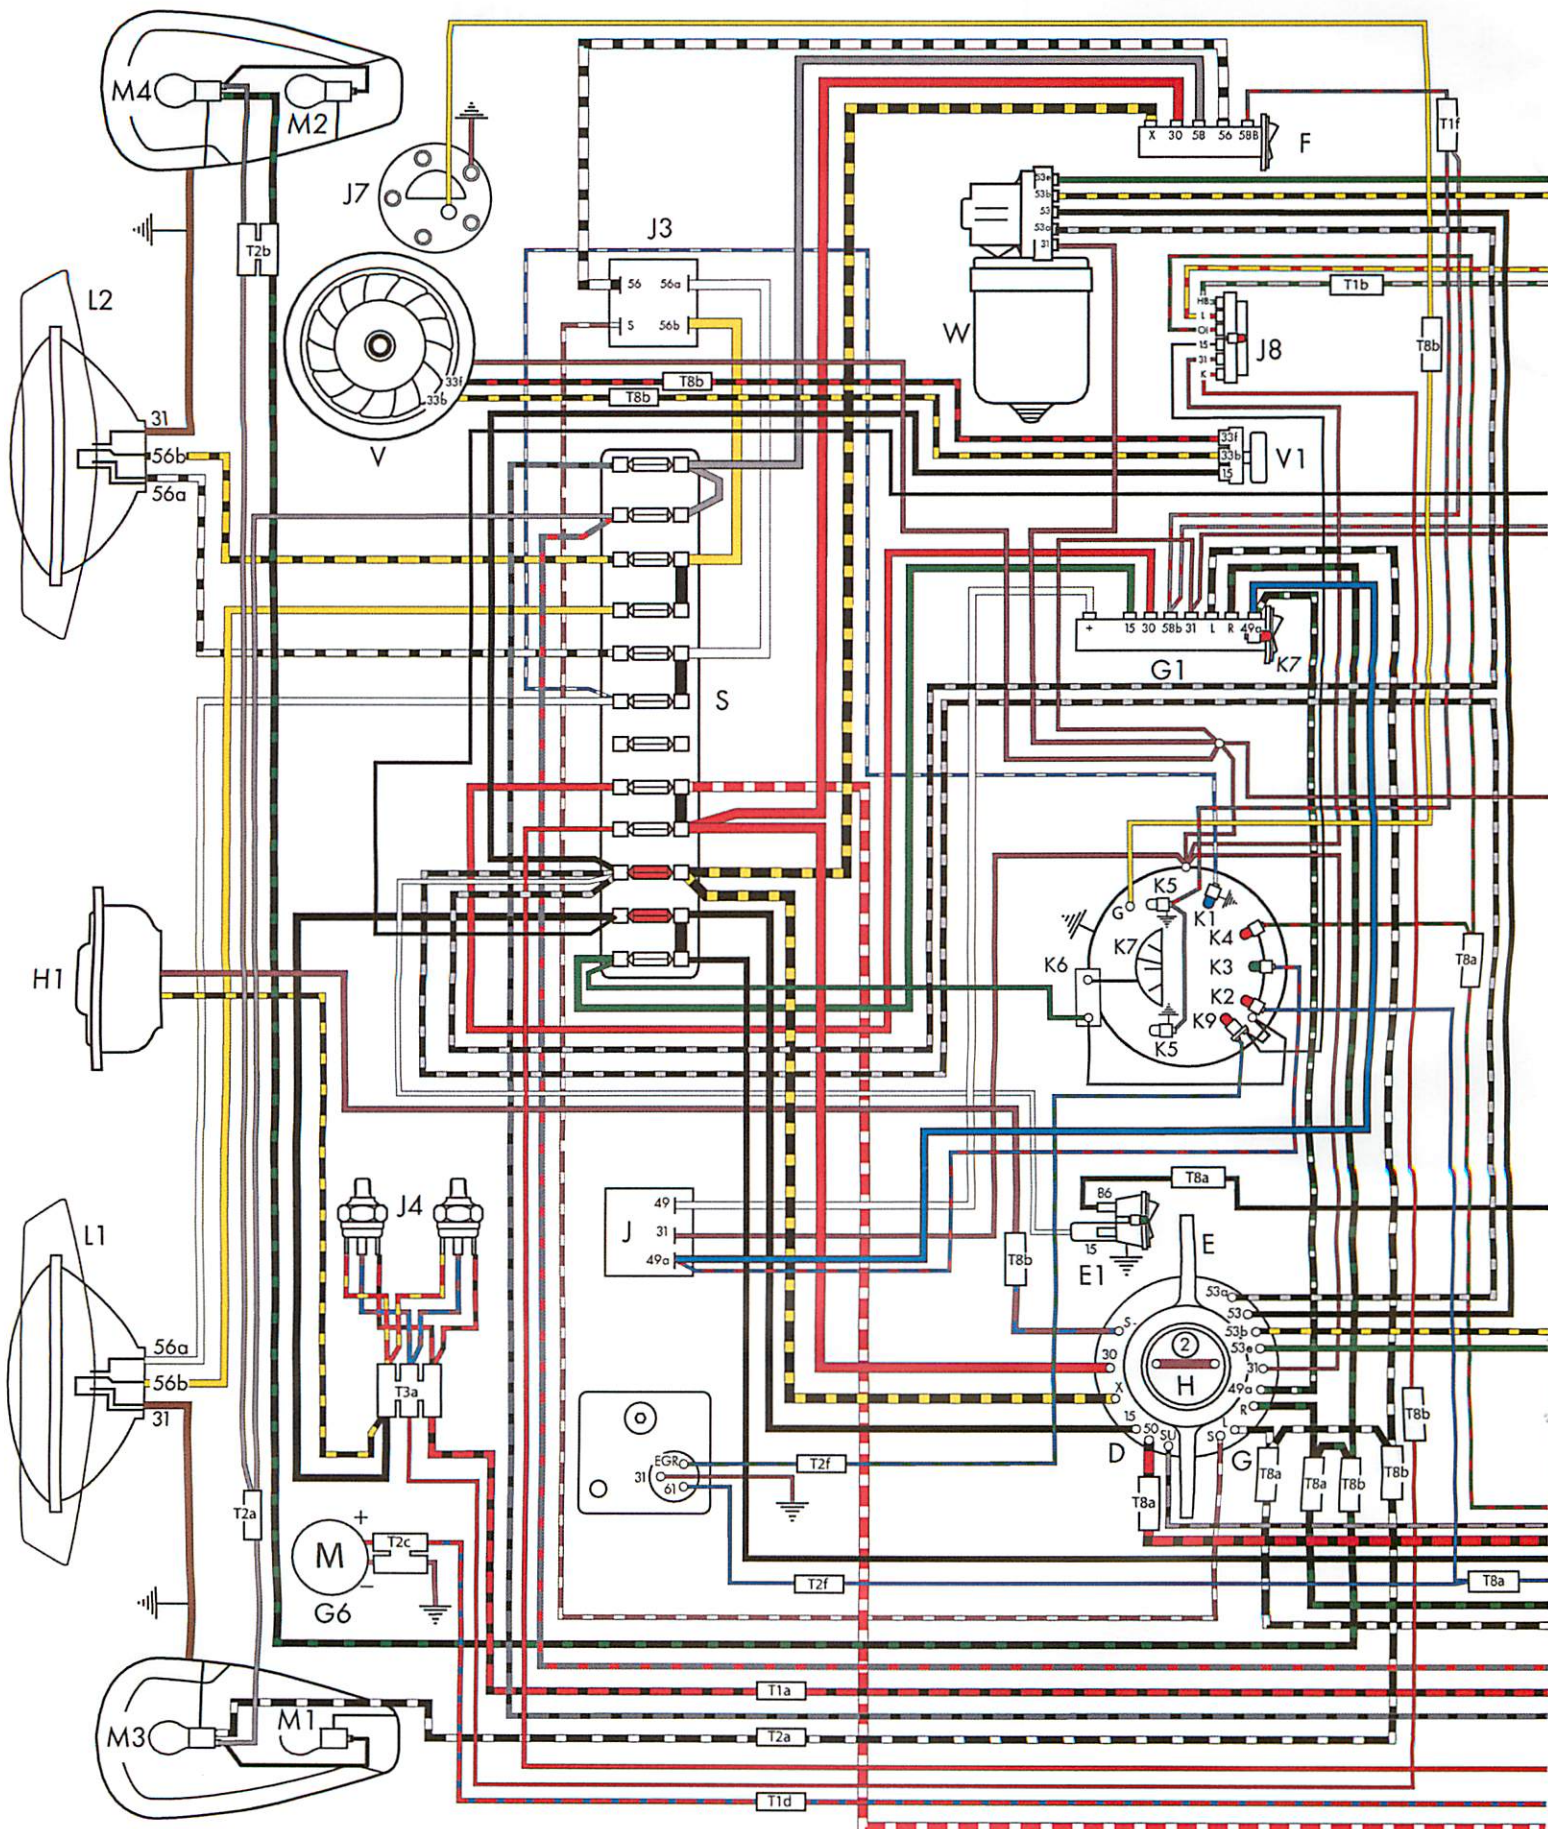

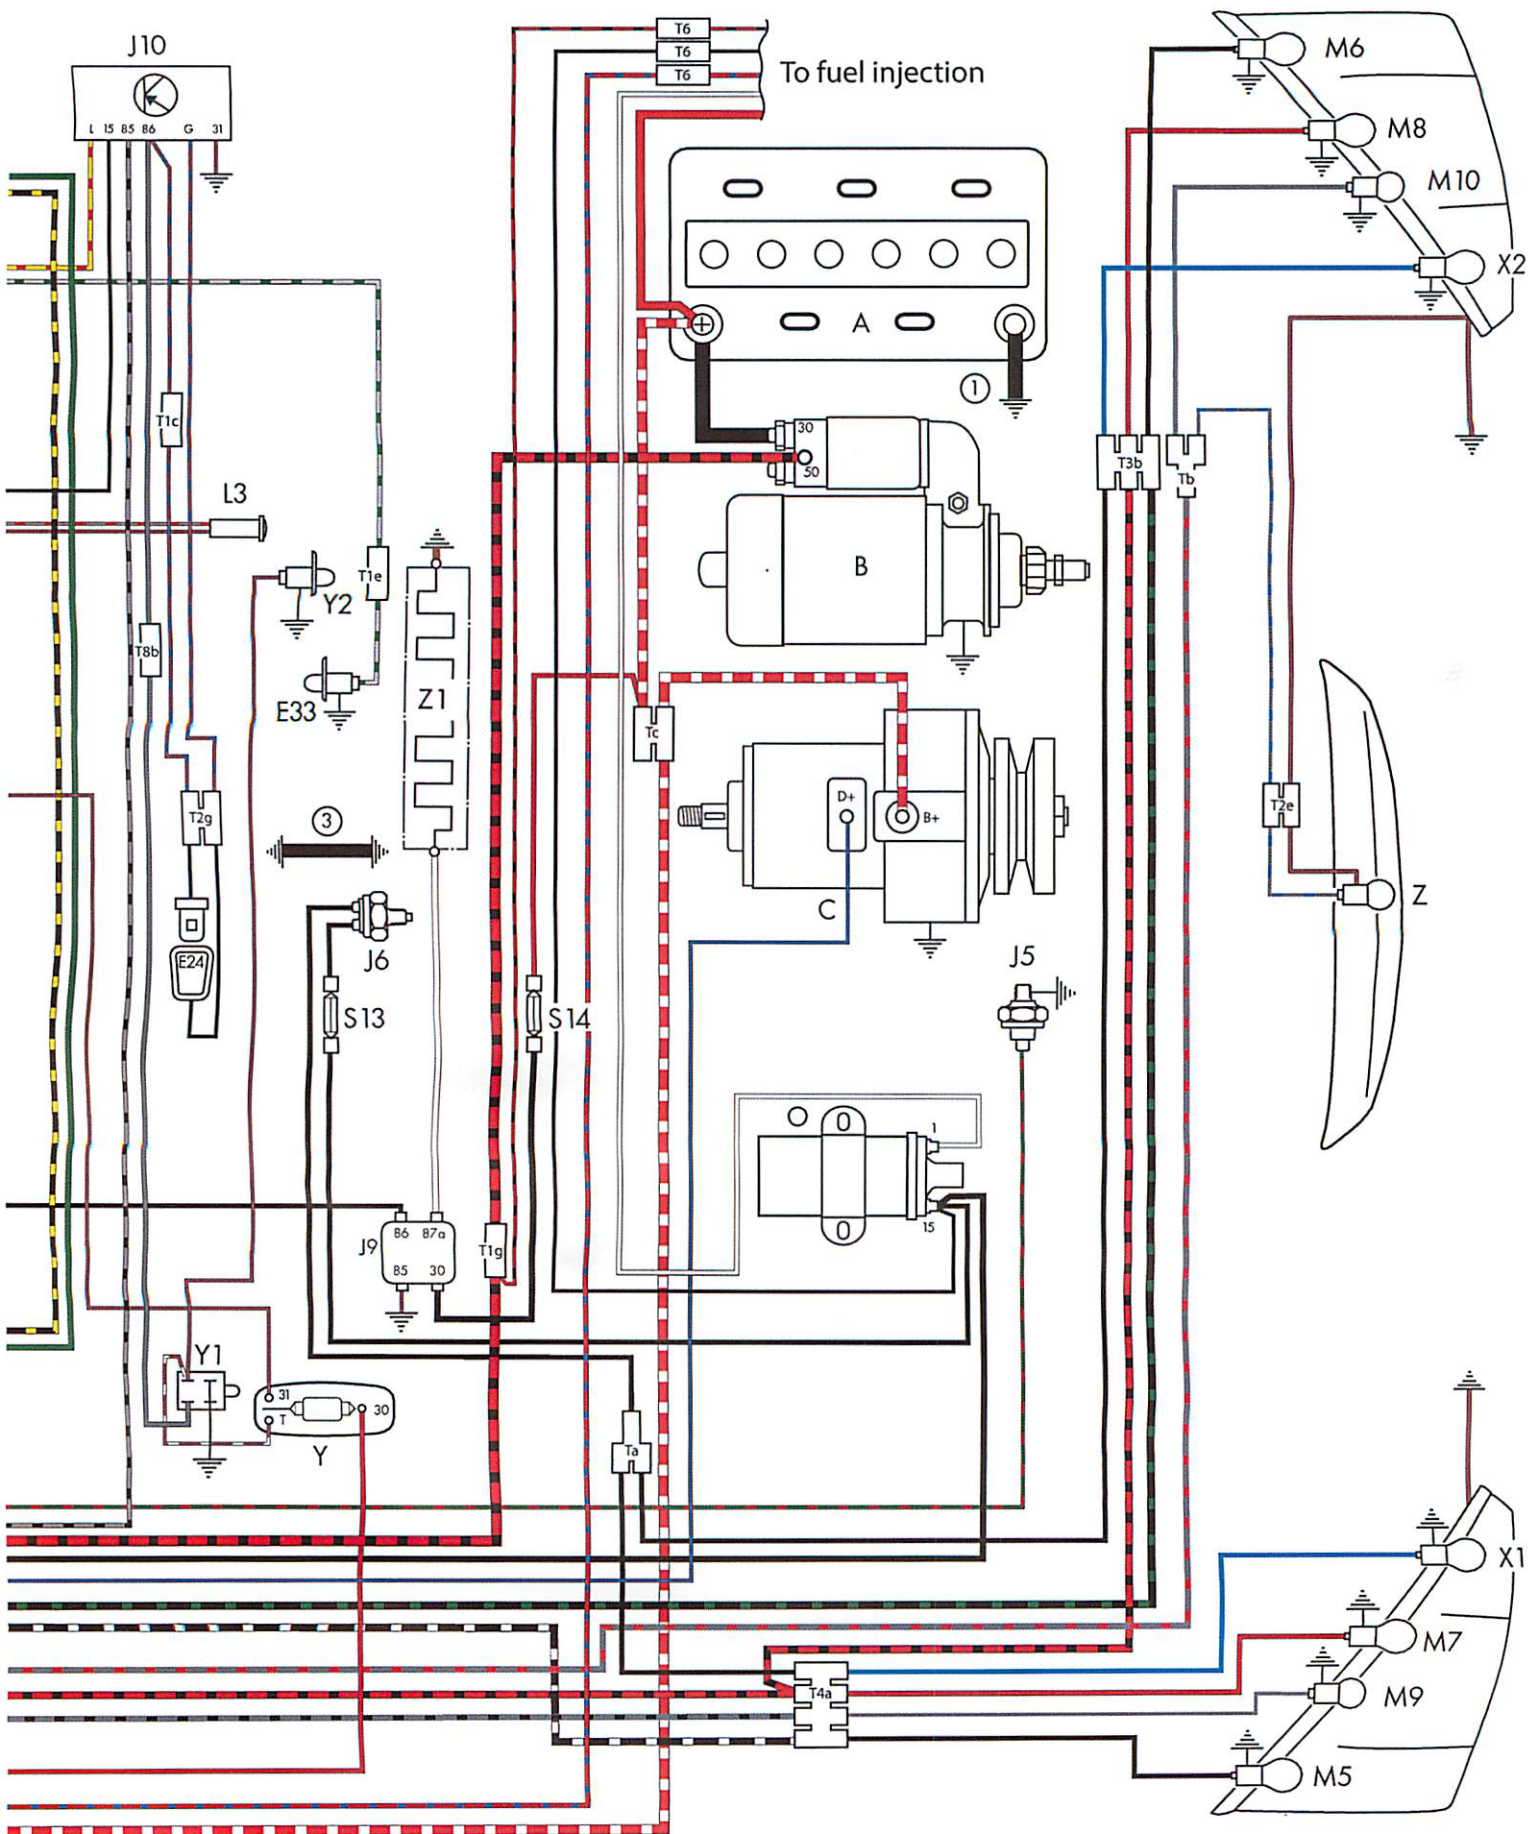

Clock and cigarette lighter are not shown.

A	Battery	Ta	Wire connector, "Y", behind insulation in engine compartment
B	Starter	Tb	Wire connector, "Y", behind insulation in engine compartment
C	Alternator	Tc	Wire connector, connected double, under rear seat
D	Starter/Ignition switch	T1a	Wire connector, single, behind dashboard
E	Windshield wiper switch	T1b	Wire connector, single, behind dashboard
E1	Rear window defog switch *	T1c	Wire connector, single, behind dashboard
E24	Safety belt switch, left	T1d	Wire connector, single, in front luggage area
E33	Parking brake light switch	T1e	Wire connector, single, on frame
F	Light switch	T1f	Wire connector, single, behind dashboard
G	Turn indicator switch	T1g	Wire connector, single, under rear seat
G1	Emergency flasher switch	T1h	Wire connector, single, in engine compartment
G6	Electric fuel pump	T2a	Wire connector, double, in front luggage area, left
H	Horn button	T2b	Wire connector, double, in front luggage area, right
H1	Horn	T2c	Wire connector, double, in front luggage area
J	Turn Signal/Emergency relay	T2e	Wire connector, double, on engine door
J3	Dimmer relay	T2f	Wire connector, double, in front luggage area
J4	Stop light switches	T2g	Wire connector, double, under drivers seat
J5	Oil pressure switch	T3a	Wire connector, triple, in front luggage area, left
J6	Back-up light switch	T3b	Wire connector, triple, behind insulation in engine compartment, right
J7	Fuel gauge sending unit	T3c	Wire connector, triple, in engine compartment
J8	Brake/seat belt warning light	T4a	Wire connector, 4 point, behind insulation in engine compartment, left
J9	Rear window defog relay *	T6	Wire connector, 6 point, under rear seat
J10	Seat belt warning system/buzzer	T6b	Wire connector, 6 point, in engine compartment
K1	High beam warning light	T8a	Wire connector, 8 point, behind dashboard
K2	Alternator warning light	T8b	Wire connector, 8 point, behind dashboard
K3	Turn indicator warning light	V	Fresh air fan *
K4	Oil pressure warning light	V1	Fresh air fan switch *
K5	Speedometer light	W	Windshield wiper motor
K6	Fuel gauge vibrator	X1	Back-up light, left
K7	Fuel gauge	X2	Back-up light, right
K9	EGR light	Y	Interior light
L1	Sealed-beam unit, left	Y1	Interior light switch, left
L2	Sealed-beam unit, right	Y2	Interior light switch, right
L3	Light for heater lever illumination	Z	License plate light
M1	Parking light, left	Z1	Rear window defogger *
M2	Parking light, right		
M3	Turn indicator, front left		
M4	Turn indicator, front right		
M5	Turn indicator, rear left		
M6	Turn indicator, rear right		
M7	Brake light, left		
M8	Brake light, right		
M9	Tail light, left		
M10	Tail light, right		
O	Coil		
S	Fuse box, 12 fuse		
S13	Back-up light fuse in engine compartment		
S14	Rear window defog fuse *		

* This was optional

- ① Battery ground strap
- ② Steering column to steering box ground jumper
- ③ Chassis to transaxle ground strap

Main Harness 1975-1979 Super Beetle

