

# 1. 6V without hazard warning switch

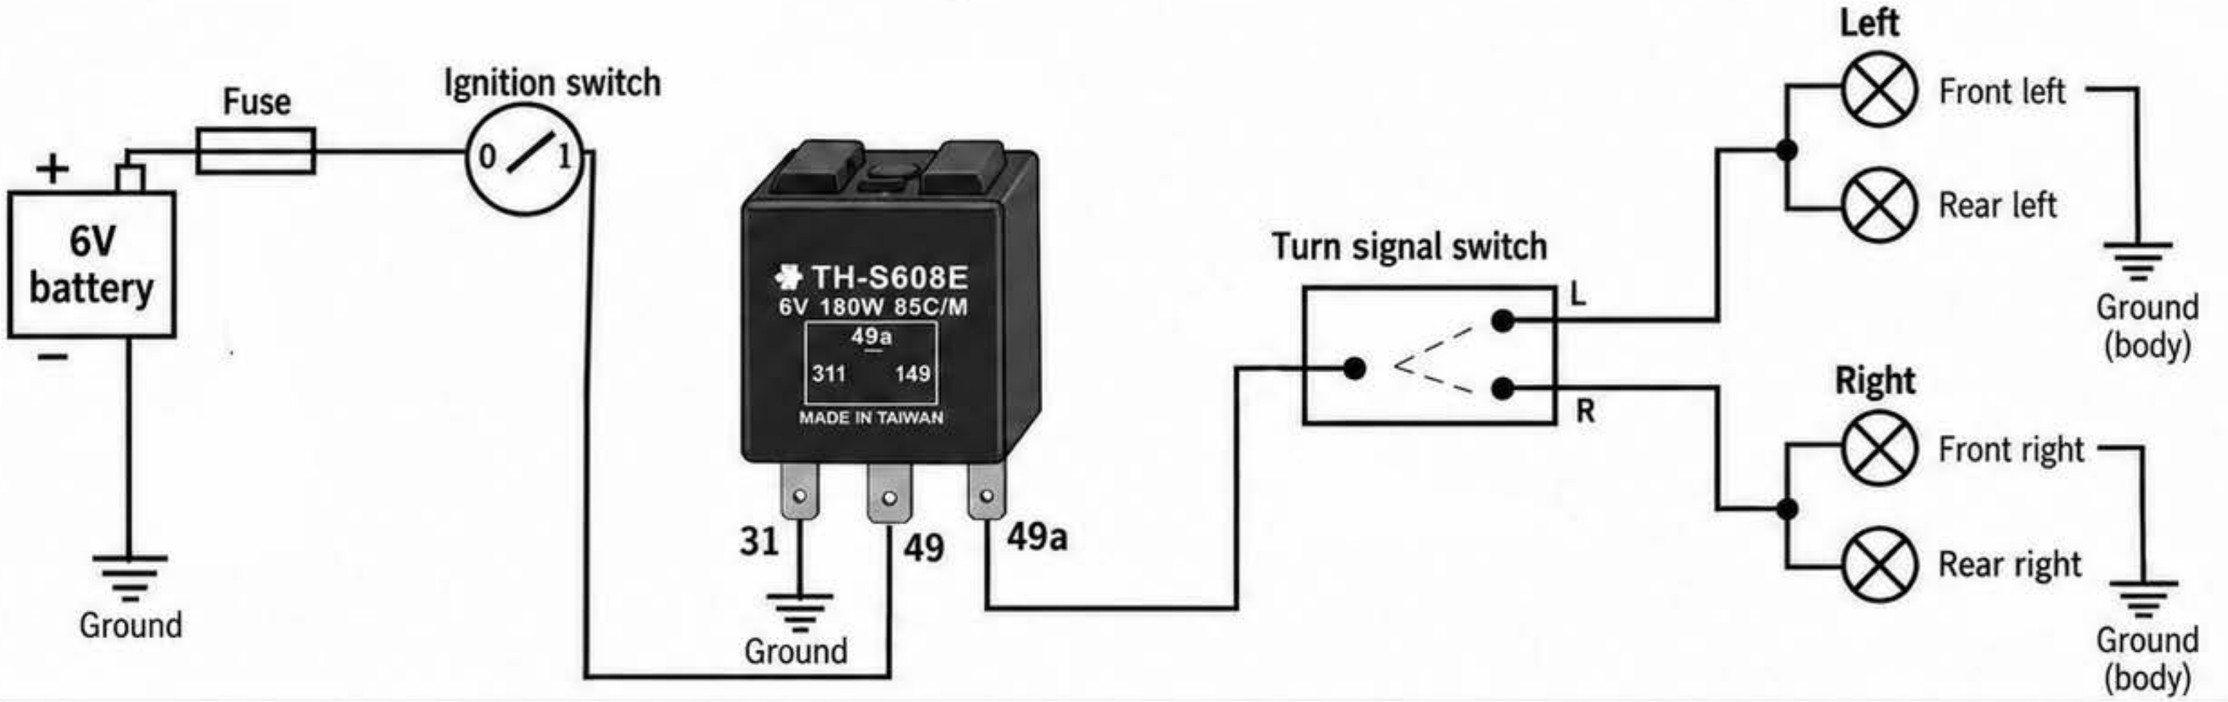


# 2. 6V with hazard warning switch

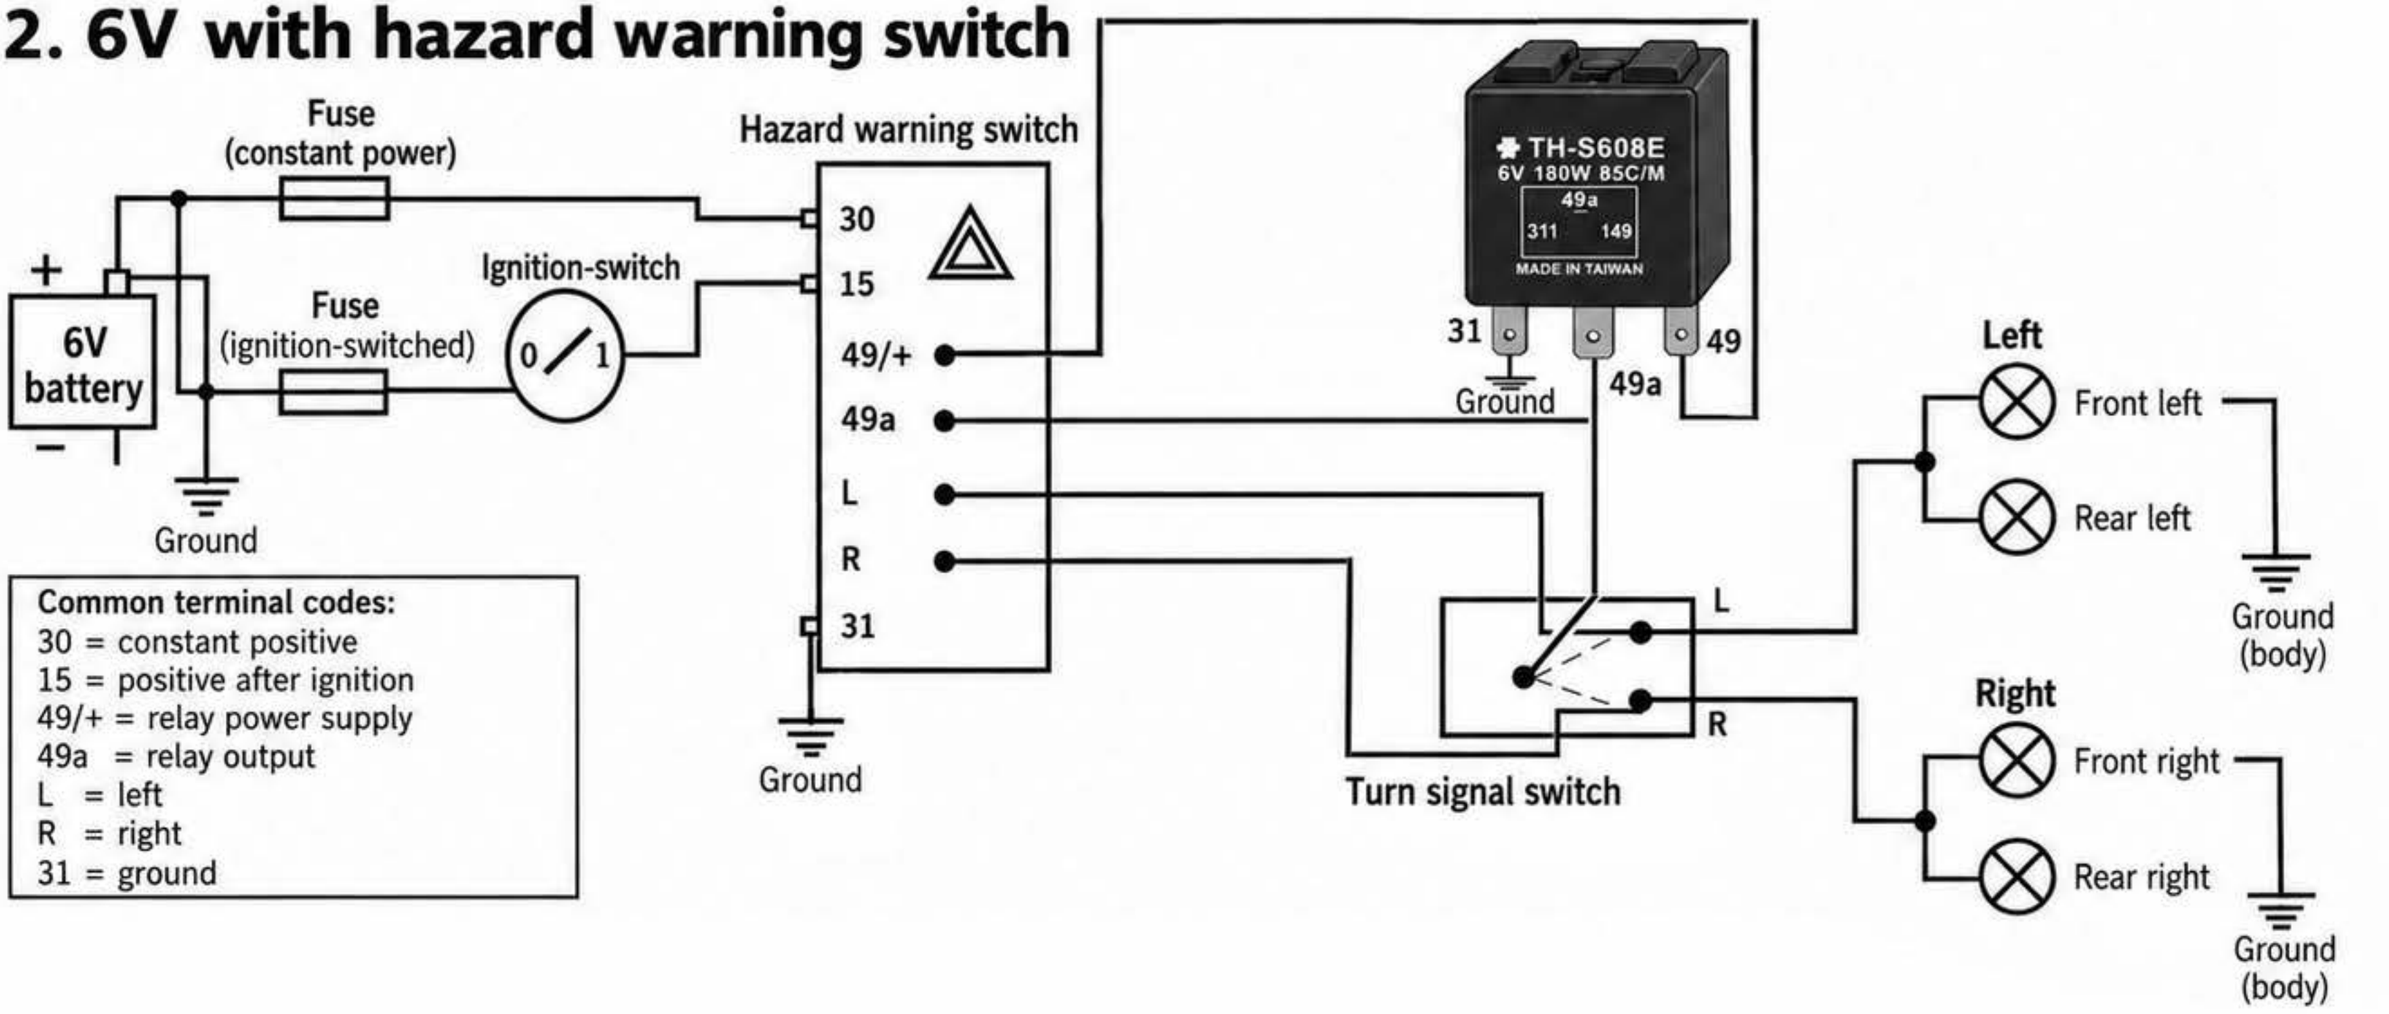


**Common terminal codes:**
30 = constant positive
15 = positive after ignition
49/+ = relay power supply
49a = relay output
L = left
R = right
31 = ground