

INSTALLATION INSTRUCTIONS




1. Mark location of mounting button on outside of windshield.
2. Clean inside of windshield thoroughly!
Remove any old adhesive remaining on windshield.

**WINDSHIELD MUST BE
ABSOLUTELY CLEAN OR MOUNT
WILL NOT STICK.**




3. MIX THE TWO CEMENTS
A AND B THOROUGHLY IN
EVEN PORTIONS.

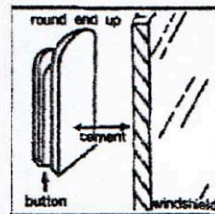

4. Apply the mixed cement
evenly to button on surface
where flat surface appear.

**DO NOT APPLY THE CEMENTS ON
MARKING SURFACE.**
(Please ensure the round end up)

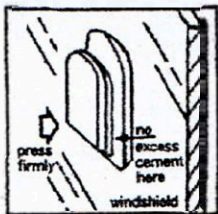

5. Press button firmly into
place (windshield glasses).
Squeeze out extra cement.
Remove excess cement
from around button. Wait
24 hours to mount mirror.



6. Loosen set screw. Slide mirror
down over button, tighten screw
until "gently snug". DO not
over tighten.

FOR YOUR SAFETY:

The mount is designed to, break off
upon impact during an accident. Over
tightening may break the mount.