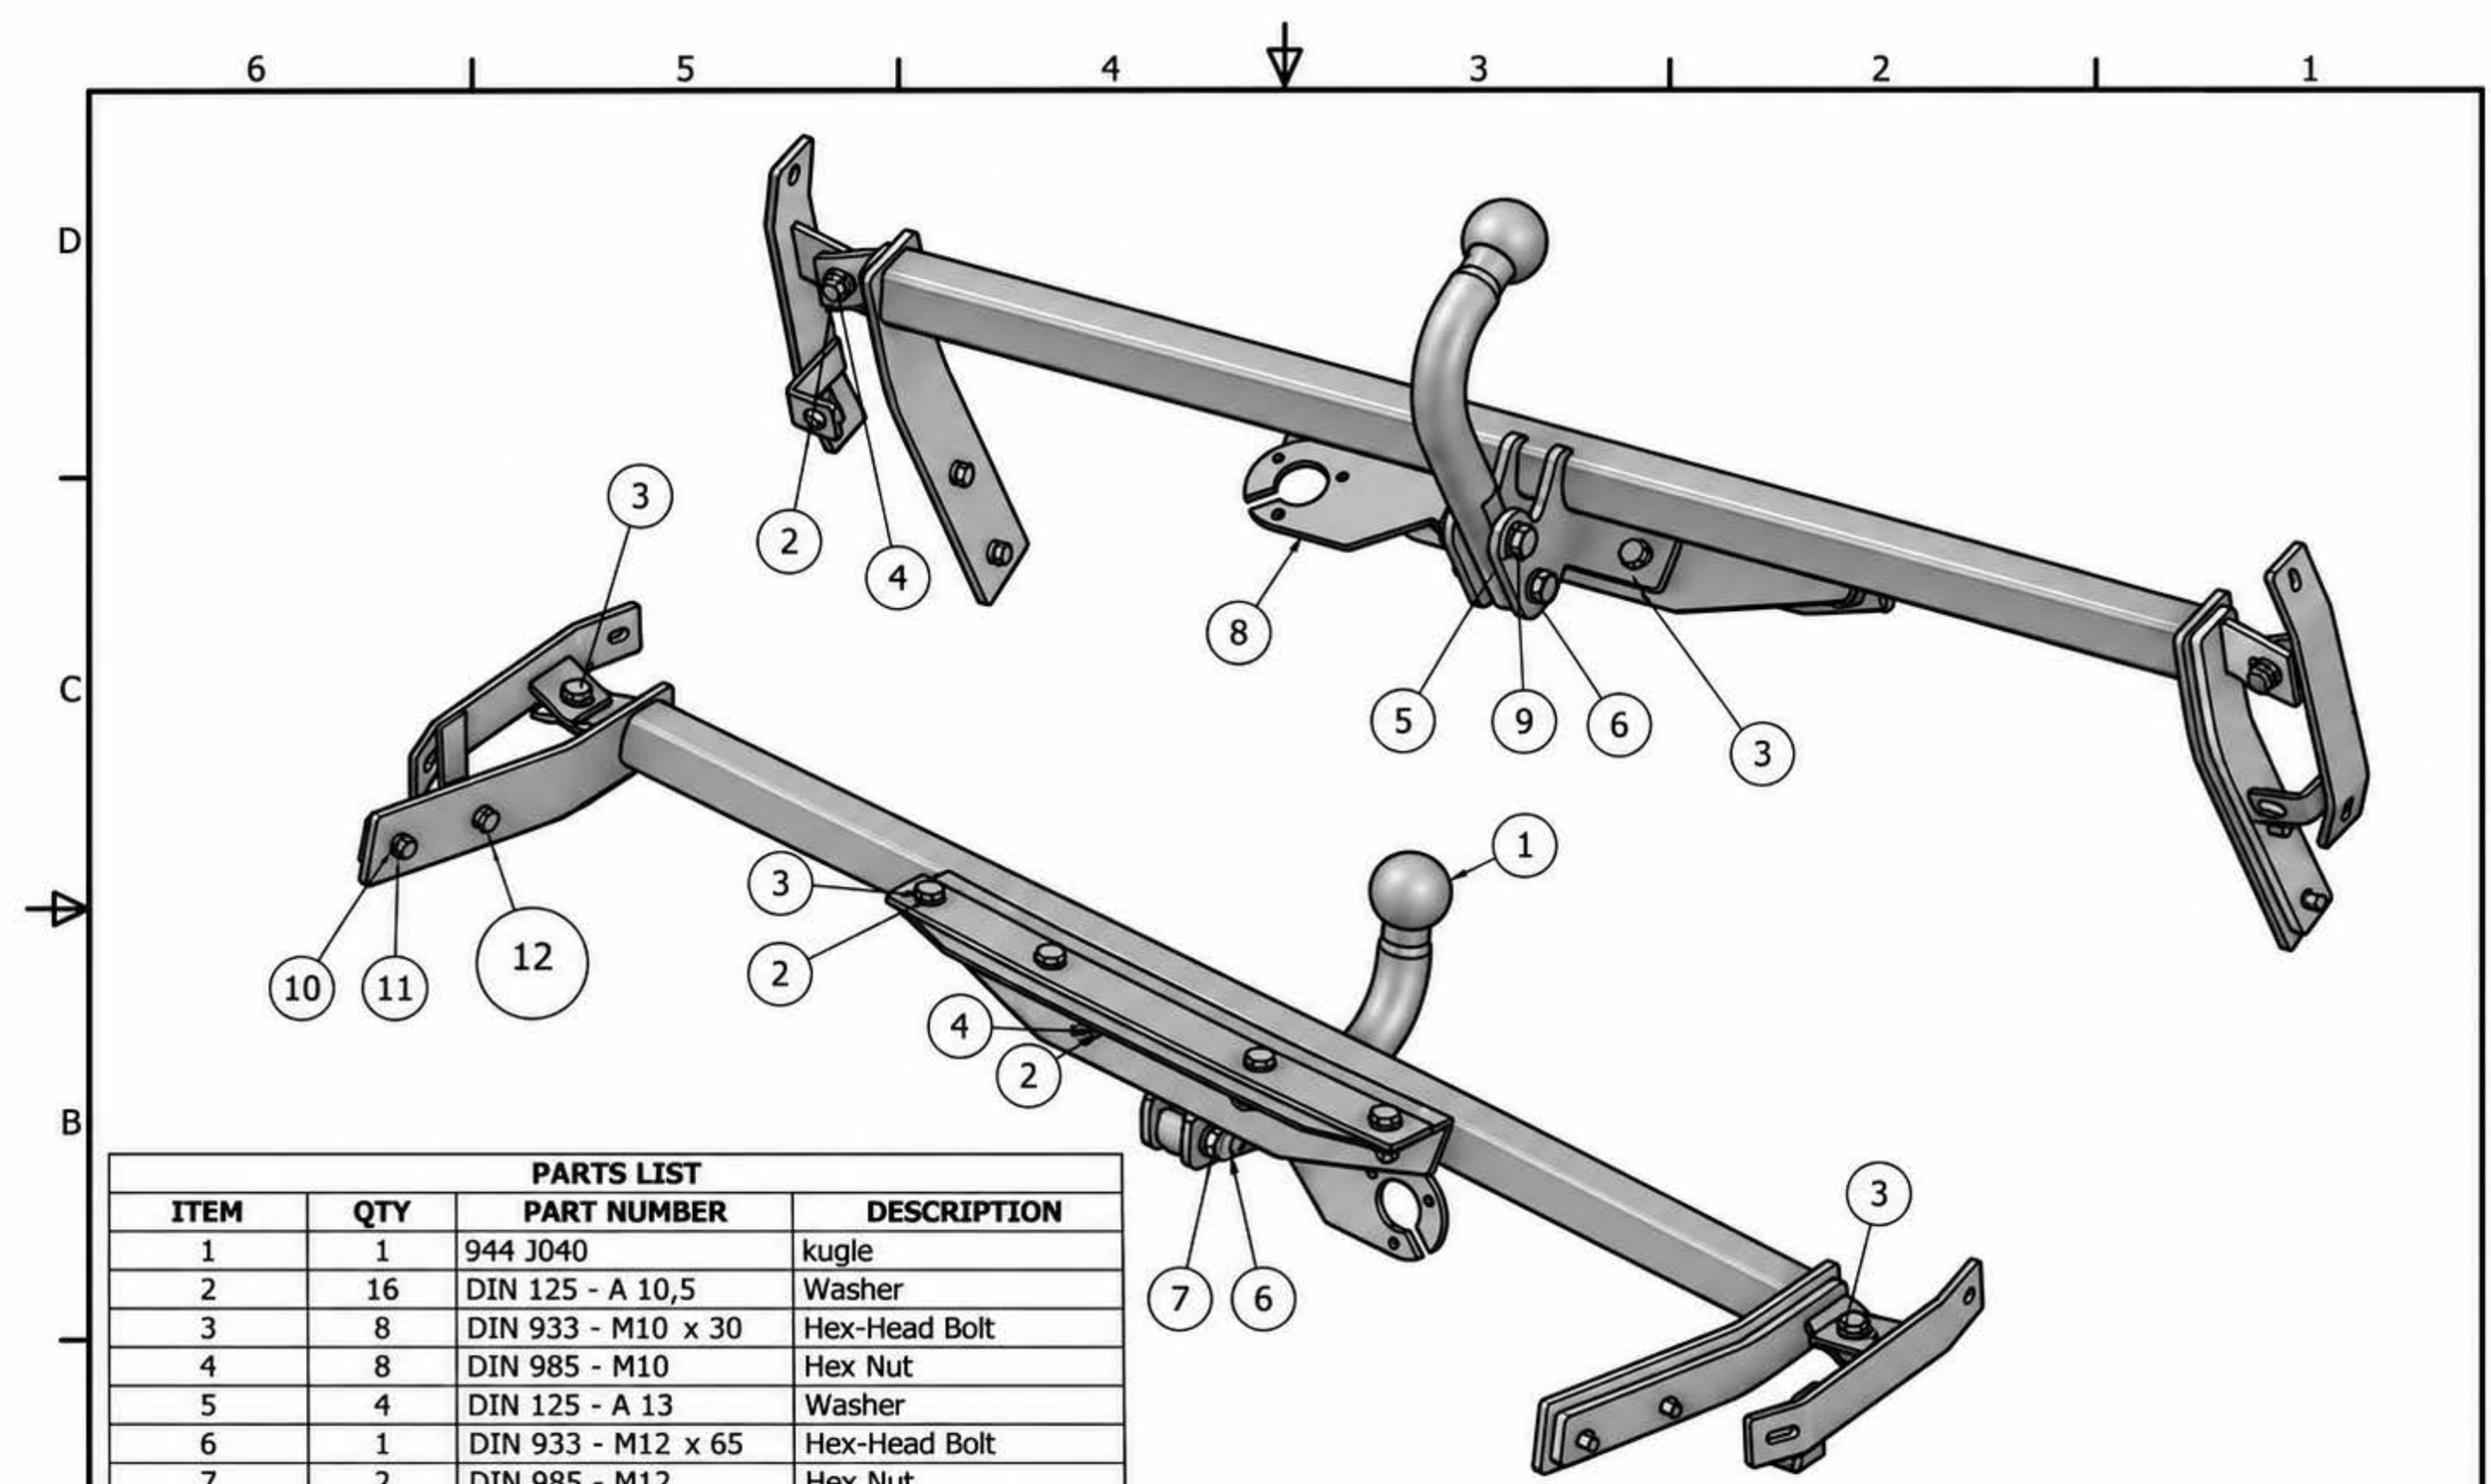


PARTS LIST			
ITEM	**QTY**	**PART NUMBER**	**DESCRIPTION**
1	1	944 J040	kugle
2	16	DIN 125 - A 10,5	Washer
3	8	DIN 933 - M10 x 30	Hex-Head Bolt
4	8	DIN 985 - M10	Hex Nut
5	4	DIN 125 - A 13	Washer
6	1	DIN 933 - M12 x 65	Hex-Head Bolt
7	2	DIN 985 - M12	Hex Nut
8	1	8095-10	Dåseplade
9	1	DIN 933 - M12 x 70	Hex-Head Bolt
10	4	DIN 125 - A 8,4	Washer
11	4	DIN 128 - A8	Spring Washer
12	4	DIN 933 - M8 x 30	Hex-Head Bolt

Designed by	Checked by	Approved by	Date	Date	
SG				07-05-2025	

DA Produktion A/S	VW Type 3		
	45-4683-00	Edition	Sheet 1 / 1

INSTALLATION INFORMATION

Installation and parts

Installation overview

1. Preparation

Remove the rear bumper and original bumper brackets. Temporarily remove the rear exhaust silencer and the rubber seal of the cooling air duct to create sufficient working space.

2. Position the towbar

Slide the two side arms of the towbar into the original bumper mounting channels. Initially leave the fasteners slightly loose and align the complete assembly.

3. Central mounting point

Position the central angle bracket against the bodywork near the cooling air duct. Mark the mounting holes, check the position and drill the required holes. Remove burrs and protect the exposed metal against corrosion.

4. Final assembly

Secure the central bracket using the appropriate bolts and reinforcing plates. Tighten all connections in accordance with the specifications for the fasteners used. Carefully seal the drilled holes.

5. Finishing

Refit the bumper, exhaust silencer and cooling air duct rubber seal. Check that the cooling air seal is completely airtight and that no components come into contact with the exhaust.

Earlier models up to 7.1969

On these models, the rear bumper mounting holes are in different positions. The outer towbar brackets to which the bumper is attached must therefore be modified.

Electrical connection and documentation

The electrical wiring kit and trailer socket must be ordered separately. No official approval certificates are available for this towbar. Check the applicable local regulations before installation.

Parts list

Item	Qty	Part number	Description
1	1	944 J040	Tow ball
2	16	DIN 125 - A 10,5	Washer
3	8	DIN 933 - M10 x 30	Hex-head bolt
4	8	DIN 985 - M10	Lock nut
5	4	DIN 125 - A 13	Washer
6	1	DIN 933 - M12 x 65	Hex-head bolt
7	2	DIN 985 - M12	Lock nut
8	1	8095-10	Trailer socket plate
9	1	DIN 933 - M12 x 70	Hex-head bolt
10	4	DIN 125 - A 8,4	Washer
11	4	DIN 128 - A8	Spring washer
12	4	DIN 933 - M8 x 30	Hex-head bolt

The original drawing refers to item 1 as “kugle” (ball) and item 8 as “Dåseplade” (socket mounting plate).