




Spare Wheel Mount Fitting Instructions

(#20432)

Thank you for purchasing our heavy duty spare wheel mount

1. Please take off the bumper first;
2. Then you take the kick panels off inside the van, so you can see from inside the back of the front panel;
3. The spare wheel mount should set on the steel front, which is the bumper, look in the first picture;
4. Hold the spare wheel mount against the front of the bus, exactly in the middle of the nose;
5. Drill 2 little holes in the front lump/platform at the bottom, for the 2 screws;
6. Mark the bolt holes positions and drill 4 holes for mounting the spare wheel mount in the nose of the bus;
7. Then you can install the spare wheel mount with the 2 straight metal strips at the inside of the bus connecting to the bus, with the bolts provided;
8. Look in the picture 2 to see how it's fixed on the bus.

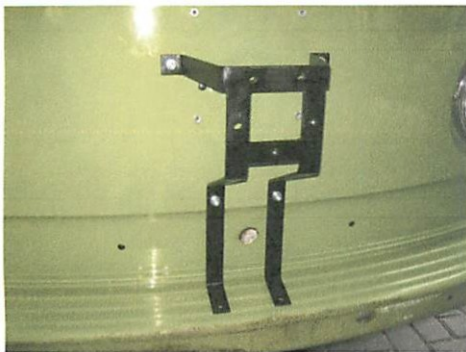

Picture 1



Picture 2