




## Paruzzi # 20546

### Step by step guide on how to fit our UNDER DASH TRAY


PLEASE NOTE: Do not over tighten screws or bolts as this may crack or damage the plastic

Thank you for purchasing our Under Dash Tray. The kit contains: 2 dash trays (left & right) and 1 central mount.

- 2 First of all drill two holes with a 6 mm drill bit in the central mount at the same distance as the bracket from your handbrake lever. Hint: remove the bracket with the two large screws and use it as template.

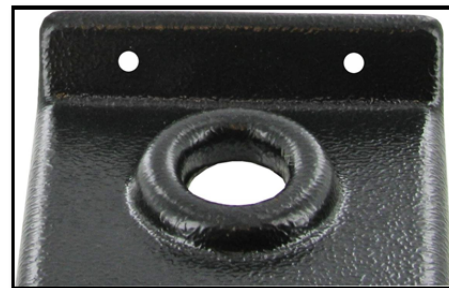


- 3 Then at the opposite end, drill two 6 mm holes in the base of the Central Mount. the centers of the holes need to be 10mm from the back edge, and 15mm from the middle.

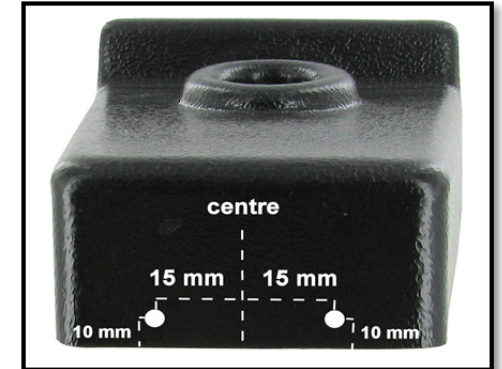

- 4 The corners of the Trays need drilling, again with the 6 mm drill bit. The centers of the holes need to be 15 mm from the end and 15 mm front the front edge.




- 5 Turn both Trays on their sides and using a 4 mm drill bit, drill a hole in each of the molded bracket up stands.

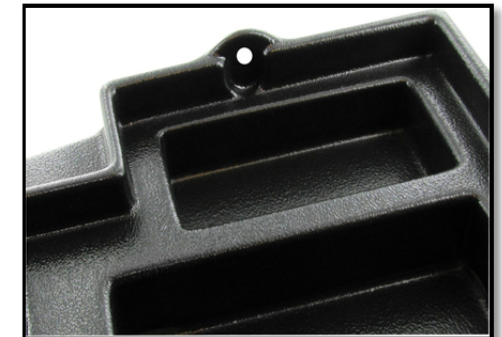


## Paruzzi # 20546


- 6 Remove the 2 large screws from above the handbrake lever if you not has doing this before.

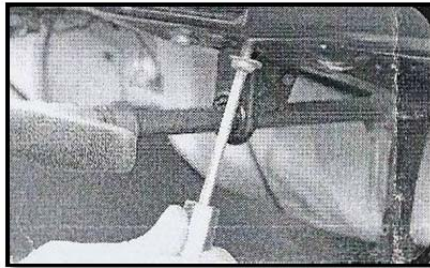


- 7 Then using a hammer and pin punch, drift out the pin and remove the handbrake handle.

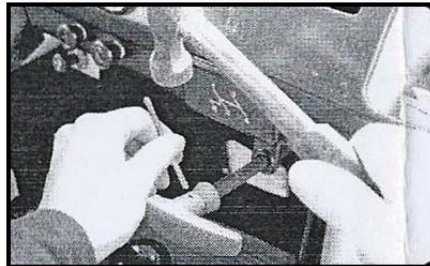

- 8 This allows the Central Mount to slide on.

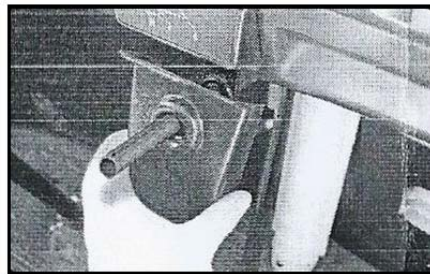


- 9 Screw the Central Mount to the dash using the large screws removed earlier and replace the handbrake handle

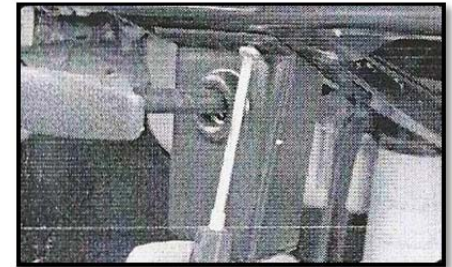


- 10 Note:

If you are unable to remove the handbrake handle, you can saw the Central Mount as shown.

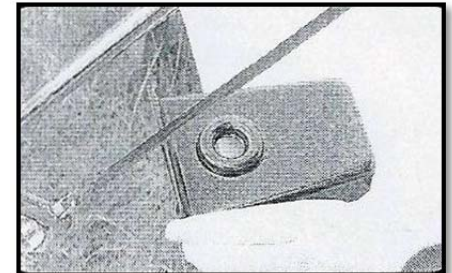


- 11 This allows the Central Mount to twist onto the handbrake bar. Then do step 9.

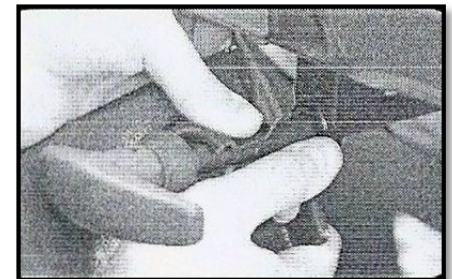


## Paruzzi # 20546


- 12 Offer up one of the Under Dash Trays and bolt it into place using 1 nut, 1 bolt and 2 washers.

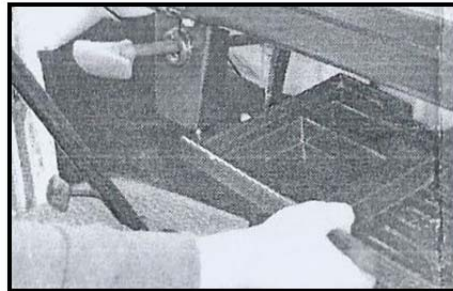


- 13 Hold the other end of the Tray up level, and using a 4 mm drill bit, drill a hole through the tray into the front pillar.

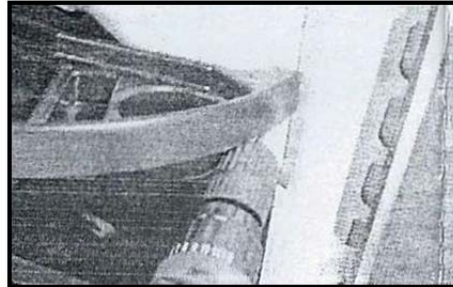

- 14 Then screw the tray to the front pillar

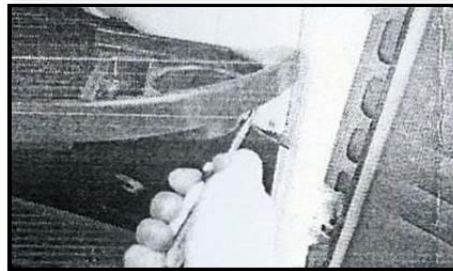

- 15 To attach the rear of the Tray, hold Tray level and using a 4mm drill bit, drill through the hole made previously, into the front bulkhead. Then screw the Tray in place.

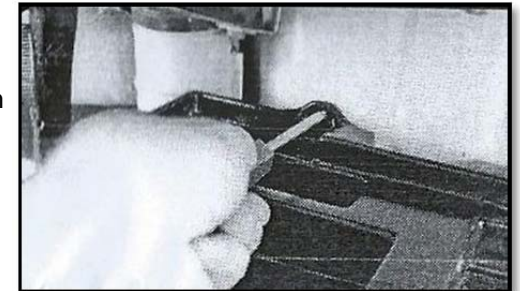

- 16 Repeat the process with the other tray.



- 17 What you should be left with is a great improvement in storage space for your type 2,

