

## Paruzzi Instruction manual for replacing or installing Rock & Roll bed hinges # 23600


These are a Pair of Original Rock and Roll Bed Hinges are original for VW T2 campervan / Type 2 Bay Window. It is made of heavy duty steel and high grade spring with black powder coating finish.

It got 2 under seat brackets and 4 screw and ring-washers. It fixes under the rock and Roll bed without any modification.


They also can be used in T1 splits and T25s for make a rock and roll bed, installation depends on which type bed you want to install in these type of van's. Please notice that the dimensions are important for installing in a T1 and T25. The sets normally used for T2.




Picture 1

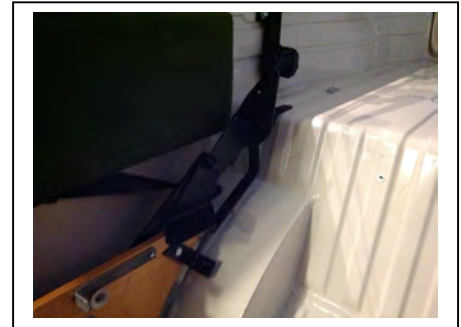


Picture 2

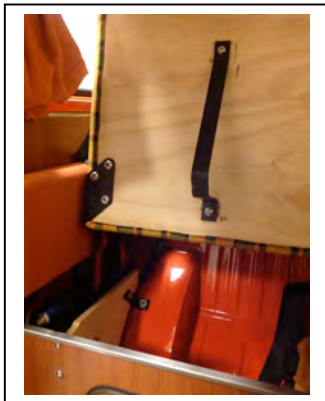

Picture 3

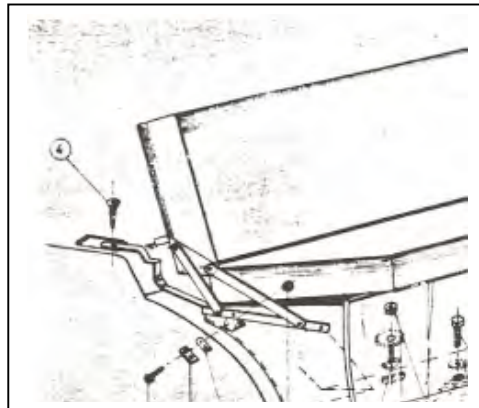

Original plan picture

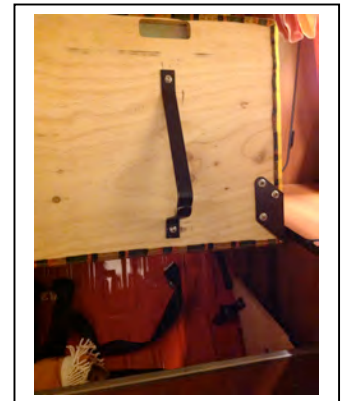

Picture 4

