


Horn Button Installation Instruction


(One wire as like GM column)



1. The backside of Horn button, the blue wire is the ground cable

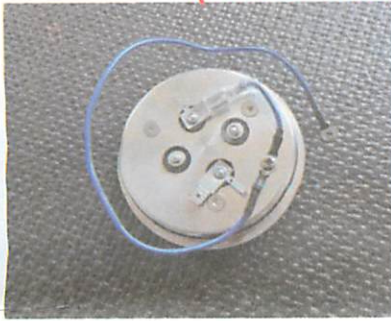

2. Connecting the positive cable from the column or adapter to positive pin

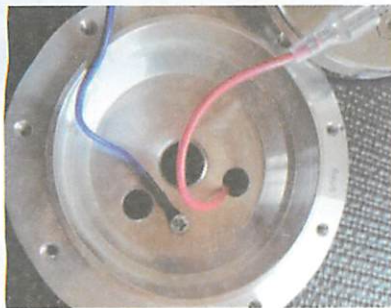


3. Ground the blue wire using self-tapping screw on the adapter




4. Test it working good, lubricate O-ring before Pushing down to the steering wheel


(Two wires as like Ford column)

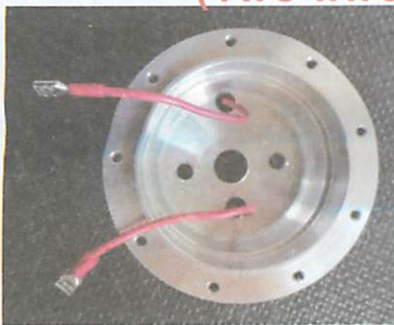

1. The column or adapter has two cables

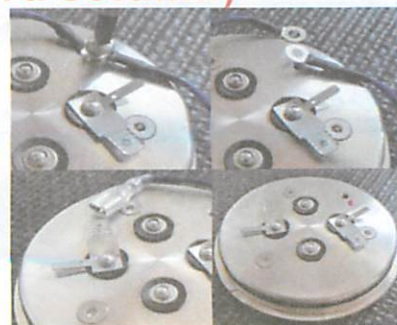

2. Unscrew and unplug, remove blue wire at back of horn button

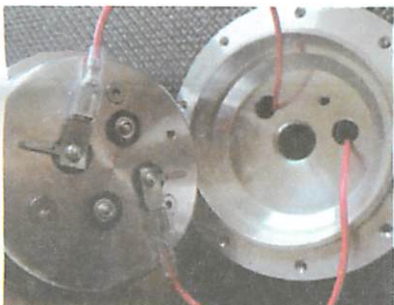

3. The two cables is connected to the pin separately



4. Test it working good, lubricate O-ring before Pushing down to the steering wheel

Tips: Lightly Oil the O ring around the base of the horn button assembly before installing it
Test and Push the horn button again to make sure it work well, then push and sit down on steering wheel.