


## Exhaust Installation Instructions (cont.)

9. Install your new Muffler. Make certain that you install the muffler clamp(s) provided. These clamps help support the weight of the muffler and failure to install these clamps voids any warranty.
10. Replace your lower engine tin
11. Cut the Heater Hose included with your header in half. Then bend the tubing to fit from the fan housing around the upper header pipe and down to the heater box.
12. Adjust and re-calibrate your carburetor if necessary.



Make certain that you install the muffler clamp(s) provided. Brackets vary in design.

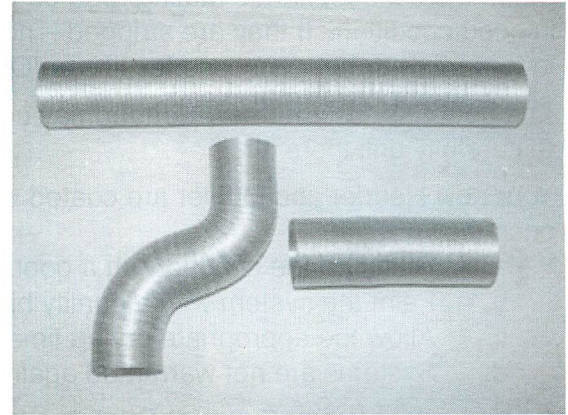

Cut the Heater Hose included with your header in half. Then bend the tubing to fit from the fan housing around the upper header pipe and down to the heater box.