


# 315898715A

## NOTCHBACK

## T-III FENDER BEADING KIT

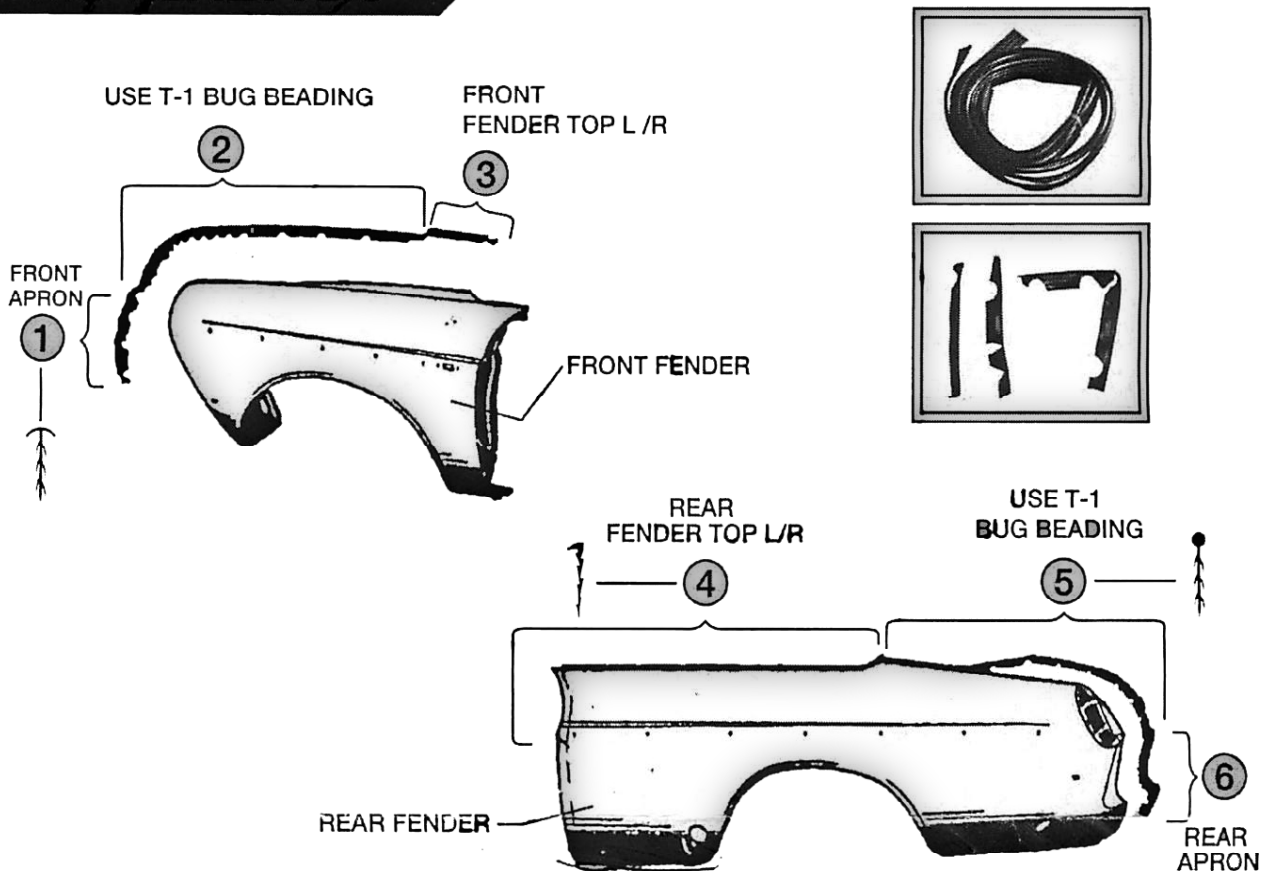

### NOTCHBACK FENDER BEADING KIT INSTALLATION INSTRUCTION

1. Each Kit has 2 pieces 20" long with a #1 label  
Fit #1 to front apron, #1 has a "T" shape profile.
2. Each kit has pieces 45" long with a #2 label  
Fit #2 from apron top to front cowl, parallel to the outer edges of the hood, #2 has a round profile same as bug beading.
3. Each kit has 2 pieces 12" long with a #3 label  
Fit the #3 to front fender top as it curves from the door to the front of the hood, #3 has a "T" shaped profile.
4. Each kit has 2 pieces 73" long with a #4 label  
Fit #4 to rear fender from the edge of the fender near the tail light, all the way to the bottom of the door jamb, #4 has a 1/4 circle profile.
5. Each kit has 5 pieces 31" long with a #5 label  
Fit #5 from apron top to rear cowl, parallel to the outer edges of the rear hood, #5 has a round profile same as bug beading.
6. Each kit has 2 pieces 12" long with a #6 label  
Fit #6 to rear apron, #6 has a "T" shape profile.

Check your kit to make sure it is complete before you get started, total 10 pieces in 3 different profiles in lengths as detailed above. You'll have to trim around each fender bolt and pie cut where needed in order for the beading to curve, as on front and rear aprons and rear fender edge at the door jamb.

**YOU MUST CUT OFF THE INSIDE EDGE AT POINTS WHERE YOU WISH TO MAKE SHARP TURNS**

