



EURO/VW FACEPLATE MODIFICATION GUIDE 10/1/08


Step One: Just for tracing purposes, mount the Infinimount brackets to the body of the radio in the position shown below to aid you in tracing the shaft holes



Step Two: Mount the Euro/VW faceplate onto the Model One and Trace the location of the shaft holes and the left and right outer most edges of the faceplate onto the Infinimount Bracket.



Step Three: Remove the faceplate and check the trace marks, then use tin snips to cut off the edges of the Infinimount Bracket and use a drill to drill out the traced holes for the shafts to fit through. Remount the Infinimount Brackets in the standard 4 hole position

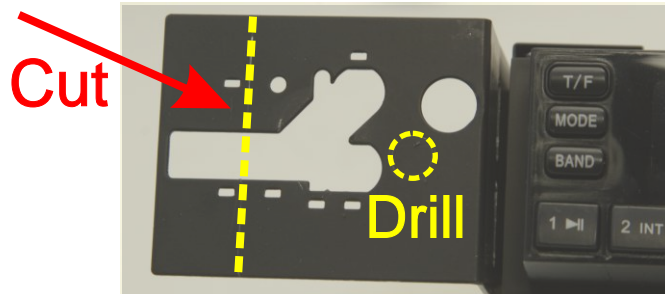

Step Four: Check for final fit and you're ready to install your Model One Radio! Enjoy
If you have questions about your Model One, please call us at 909-364-1372 or email us at support@retrosoundusa.com

