


INSTALLATION INSTRUCTIONS

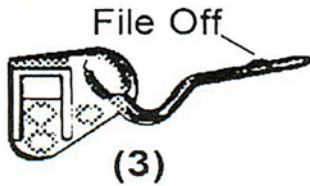

Bug Convertible '65-'72 & Ghia Convertible '65-'74

1. Loosen the mounting screws and remove visor arm latch mechanism from car. 2. Loosen the screw on the old visors and remove it off the mechanism. 3. File the tab on the visor arm flat as illustrated. 4. With screwdriver, punch a hole in the new sunvisors for hardware as illustrated. 5. Take the visor and gently push it on to the rod, turning it back and forth until visor is completely installed on to the rod. **Note:** The supplied hardware on the Ghia visors must be removed first, by turning back and forth in an outward motion. 6. Reinstall visor mechanism in the car.

All other applications

1. Loosen the mounting screws and remove visors completely out with brackets. **Note:** Save screws for mounting new visors. 2. Match your new visors with old ones to determine if there is a difference between the driver and passenger. **Note:** Some models are not universal. 3. Install new visors.