

Installation Instruction for Adapter # 9766

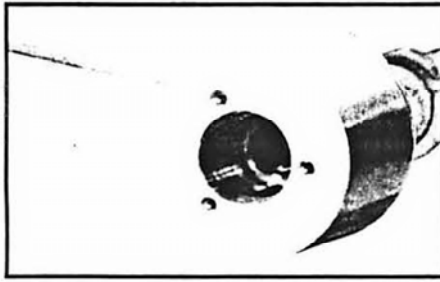


Figure #1

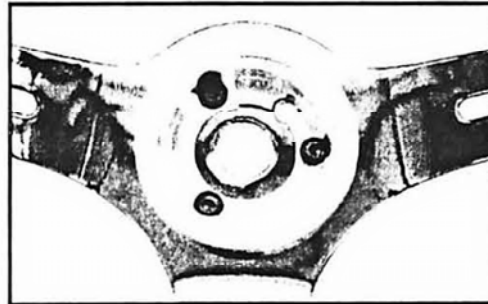


Figure #2

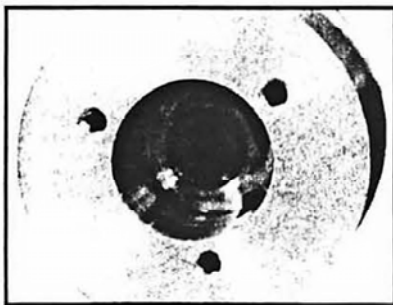


Figure #3

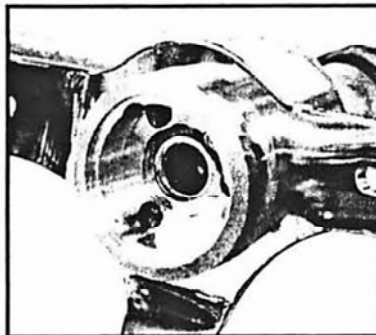


Figure #4


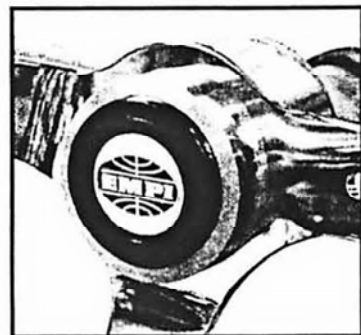


Figure #5

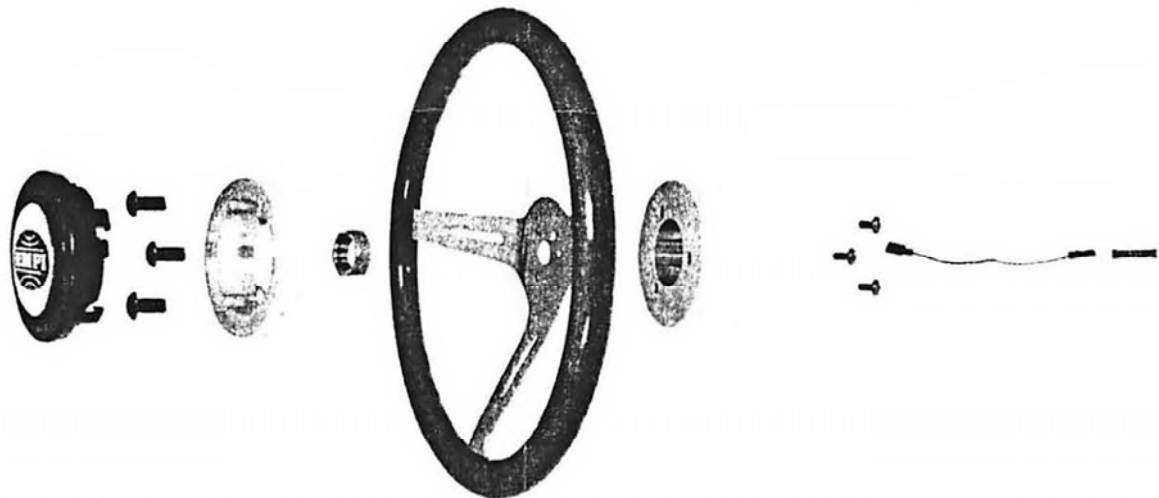

1. Disconnect the vehicle battery.
2. Remove existing steering wheel (refer to your VW Repair Manual)
3. Mount your existing turn signal cancellation cam to the rear of the Hub supplied in this Kit. Attach by using your original screws (3) or the plastic ones provided in this kit.
4. Position hub on splined steering shaft ensuring that the top of the Hub orientation is correct. (See Figure #1)
5. Check Wheel for position and correct if necessary, Install the Wheel Retainer Nut provided in this Kit and tighten to secure the Hub. (See Figure #3)
6. Position Outer Hub on Face of Wheel, hold on Hub and attach using the 3 allen screws supplied. Tighten firmly. (See Figure #4)
7. The wire supplied in this Kit has two 'slip' connections. Cut the wire and splice to the existing horn wire using the splice connector provided using the desired end to attach to the horn button.
8. Place horn button by centering the logo with the wheel. With the spring wire entering the hub first – then push into place. (See Figure #5)
9. Reconnect the Battery and Test Horn